 


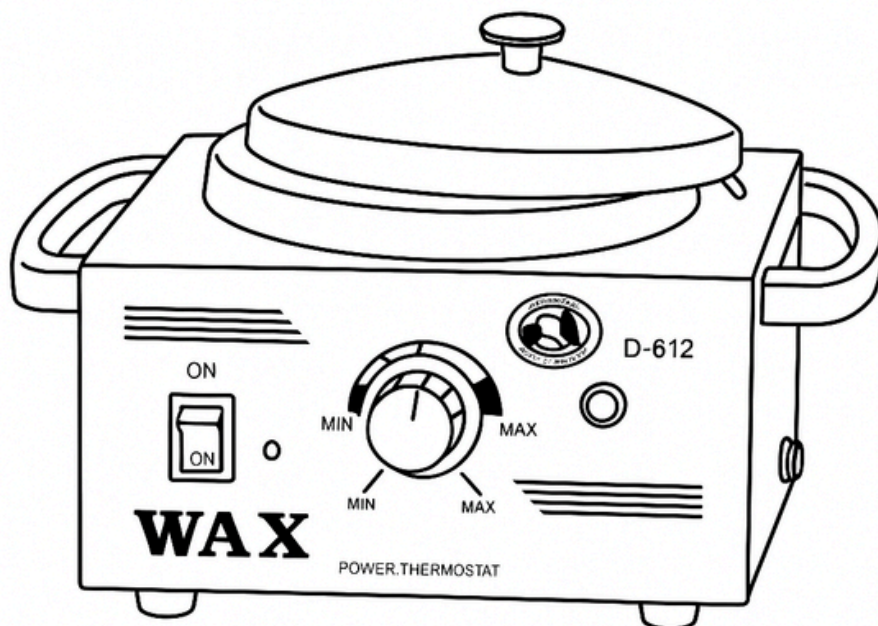

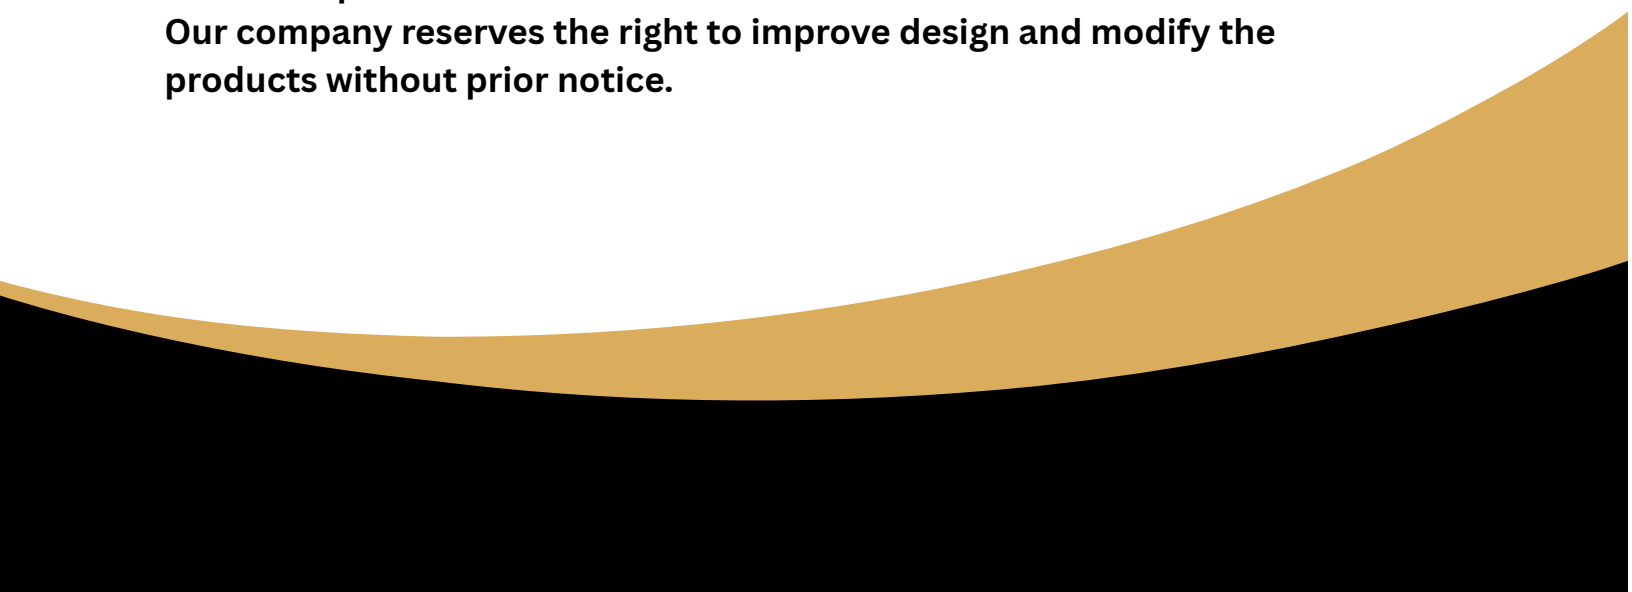 
USER MANUAL **WAX WARMER** **CR-612/622**

TABLE OF CONTENTS

1. INTRODUCTION	01
2. SAFETY PRECAUTIONS	01
3. PARTS AND FEATURES	02
4. OPERATION DIRECTIONS	03
5. CLEANING AND MAINTENANCE	03
6. TROUBLE SHOOTING	03
7. WARRANTY AND SUPPORT	04

Please read this manual carefully before using the product to ensure safe and optimal use.

Our company reserves the right to improve design and modify the products without prior notice.

A decorative wavy line in a golden-brown color, starting from the left edge and curving upwards towards the right, ending at the bottom right corner of the page.

Introduction

The Wax Warmer is a professional-grade electric wax heater designed for melting and maintaining the temperature of depilatory wax.

It is suitable for both home and salon use and accommodates standard wax containers or direct wax melting in the pot.

Safety Precautions

- Do not leave the unit unattended while in use.
- Never immerse the unit in water or any other liquid.
- Use only on a heat-resistant, flat surface.
- Ensure the plug and outlet are dry before connecting.
- Keep out of reach of children and pets.
- Always check wax temperature before applying to skin.
- Do not overfill the pot to avoid spills and burns.
- Unplug the unit when not in use or before cleaning.
- Inspect cord and plug regularly. Do not use if damaged.
- Store in a cool, dry place when not in use.



Failure to comply with these instructions will result in the voiding of the manufacturer's warranty.

Parts and Features


Features

- Adjustable Temperature Control: Customize wax melting with a rotary thermostat ranging from 0 to 80 degrees Celsius.
- Detachable Inner Pot: Easy to clean and compatible with hard wax, soft wax, wax beads, and wax cans.
- Fast Heating: Efficient heating element ensures the wax is melted quickly and evenly.
- Power Indicator Light: Indicates when the unit is on and heating.
- Cool-Touch Handles: Integrated side handles ensure safe handling while hot.
- Stable & Safe: Non-slip rubber feet keep the unit securely in place.
- Compact Design: Space-saving size for home or salon use.
- Safe and Sturdy: There is a handle on the liner for easy removal of the liner. With leakage and power failure protection function.


Specifications

- Dimensions: **CR-612**- 12"X10"X7.5"; **CR-622** 16"X10"X7.5"
- Weight: **CR-612**- 3lbs ; **CR-622**- 5lbs
- Power Supply: AC 110-240V, 50/60Hz
- Power Consumption: Approx. 100W
- Temperature Control: Adjustable thermostat (from 0 to 80 degrees Celsius)
- Indicator Light: Power status indicator
- Material: Heat-resistant plastic housing, aluminum inner pot
- Capacity: 500ml


CR-612

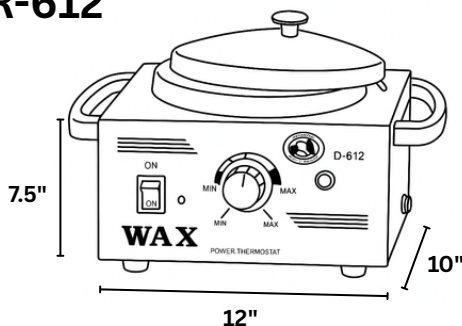

CR-622

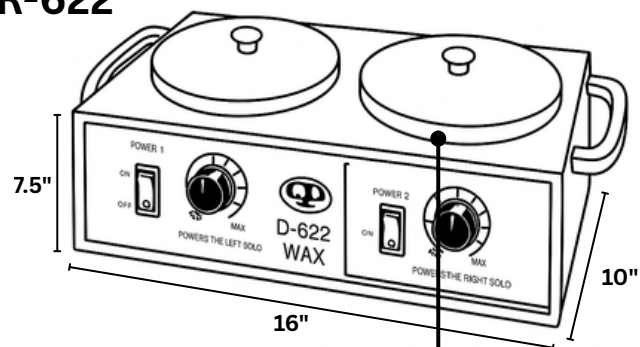

Detachable Inner Pot

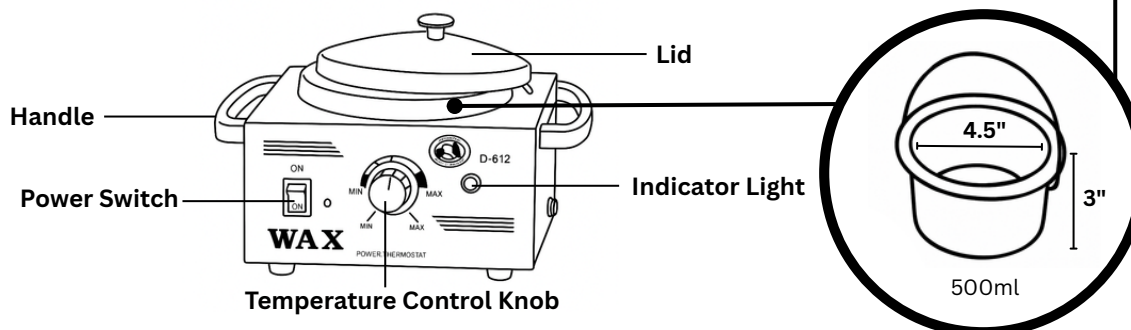 

Operation Directions

1. Set Up: Place the unit on a level, heat-resistant surface.
2. Add Wax: Place wax directly in the pot or insert a wax can.
3. Power On: Flip the ON/OFF switch to the "I" position.
4. Adjust Heat: Rotate the thermostat to the desired setting (MIN for warming, MAX for melting).
5. Monitor Wax: Wait 15–30 minutes for the wax to melt. Stir occasionally.
6. Use: Once melted, reduce to a warm temperature for application.
7. Turn Off: After use, switch off and unplug. Let the unit cool before cleaning.

Cleaning and Maintenance

- Allow the unit to cool completely before cleaning.
- Remove any remaining wax while still slightly warm (not hot) using a wooden spatula or paper towel.
- Wipe the inner pot with a soft, damp cloth.
- Use a mild soap if necessary, but never immerse the unit in water.
- Clean the outer surface with a soft dry or damp cloth.
- Do not use harsh chemicals or abrasive scrubbers.
- Always unplug before maintenance or storage.

Trouble Shooting

Problem	Possible Cause	Solution
Wax not melting	Thermostat set too low	Turn knob to a higher setting (MAX)
Power indicator not lit	Not plugged in / Switch is off	Check plug and switch position
Wax overheats / burns	Thermostat too high / no wax inside	Reduce heat / Ensure pot contains wax
Wax cools too fast	Thermostat too low after melting	Maintain a medium heat setting
Strange smell or smoke	Debris or old wax residue burning	Clean the pot thoroughly
Unit not turning on	Blown fuse or defective outlet	Check outlet / contact support

Warranty and Support

- **Warranty:** This product comes with a year warranty that covers defects in materials and parts. Failure to follow recommended care will void product warranty. Consumer misuse not covered. Inspection Required.
Normal wear and tear not covered. Satisfaction Does Not Apply.
- **Customer Support:** For any issues with assembly, use, or maintenance, please contact our customer service team at **+1 604 438 3399** Monday–Friday, 9:00 AM – 5:00 PM (Local Time) or email to **info@protabeauty.com**
- **Service:** If you need repairs or parts replacement, contact us for assistance.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.