


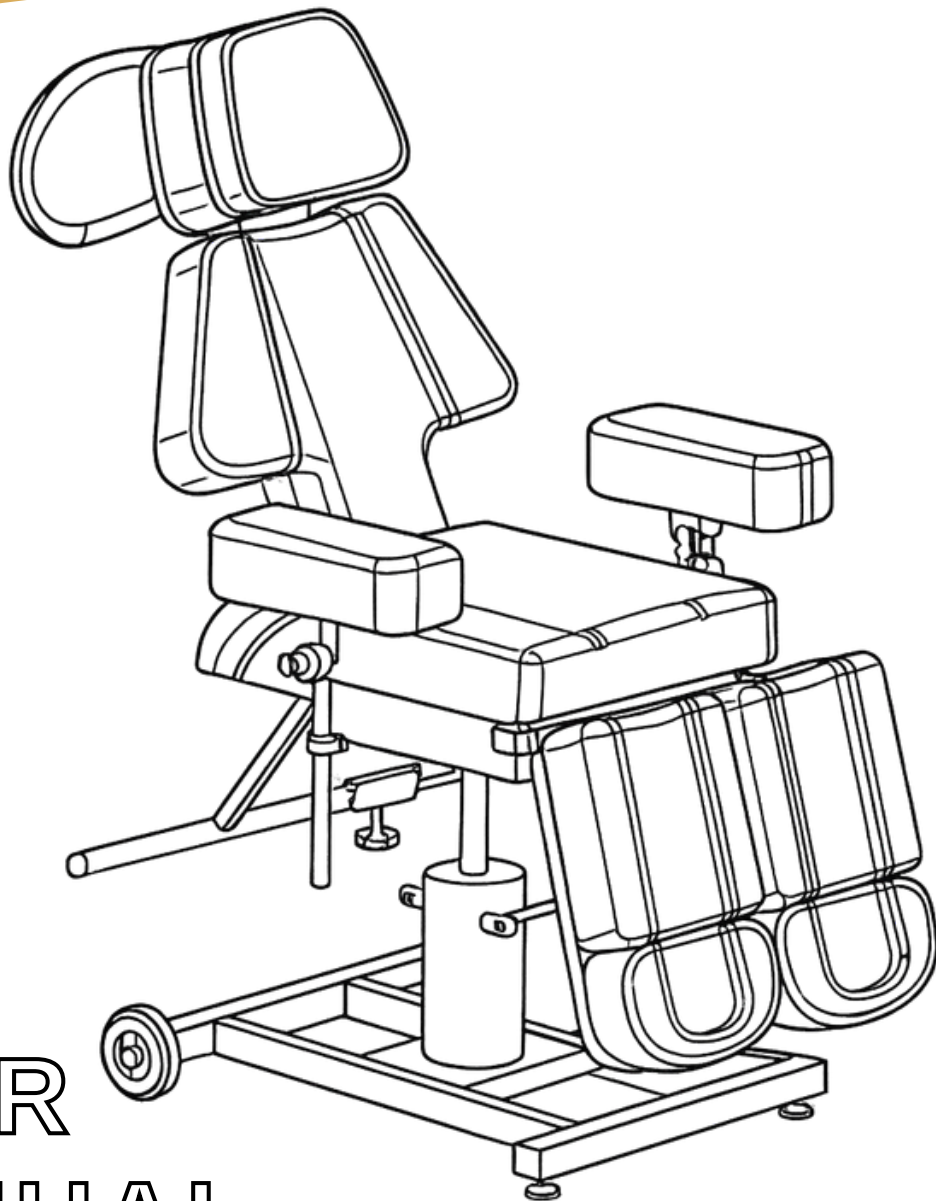

USER MANUAL

TATTOO CHAIR PB-TC001

All rights reserved.

Printed in Canada

TABLE OF CONTENTS

1. INTRODUCTION	01
.....	
2. SAFETY GUIDELINES	01
.....	
3. INSTALLATION INSTRUCTIONS	02
.....	
4. PARTS AND FEATURES	03-04
.....	
5. TROUBLE SHOOTING	05
.....	
6. CLEANING AND MAINTENANCE	06
.....	
7. WARRANTY AND SUPPORT	07
.....	

Please read this manual carefully before using the product to ensure safe and optimal use.

Our company reserves the right to improve design and modify the products without prior notice.



Introduction

Thank you for choosing our multi-position Tattoo Chair. It is designed to support clients comfortably during long tattoo sessions while giving artists precise access and ergonomic working angles.

Intended use: professional or home studios for seated or reclined clients.

Safety Guidelines

- Place the chair on a firm, level surface.
- Support each section while adjusting. Loosen → adjust → fully re-tighten all knobs/levers before use.
- Do not stand on armrests, leg rests, or seat edges. One client at a time.
- Move the chair only when no one is on it. Lift the leveling feet to roll.
- Hydraulic units contain oil; keep away from flames/heat. If leakage appears, stop using and contact service.
- This product is furniture/equipment, not a medical device. Follow local hygiene and infection-control laws.
- Children and pets should be kept away from the work area.
- When adjusting each part, please keep your hands, feet and head away from the position indicated by the arrow.
(As shown in the photo)

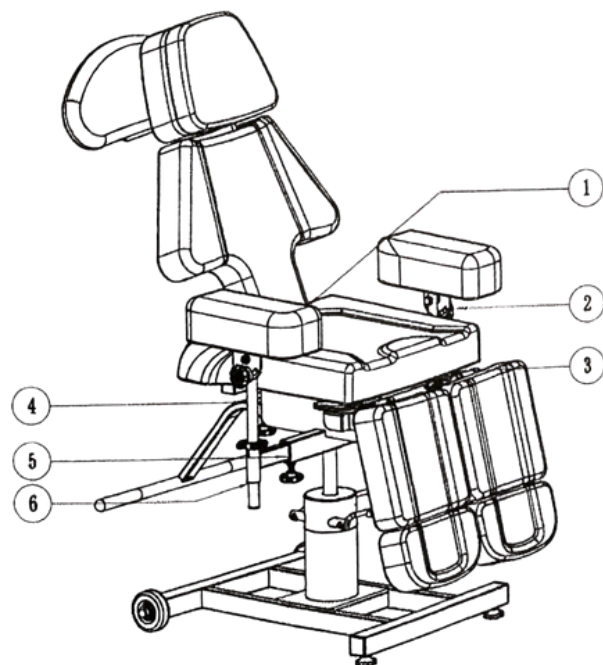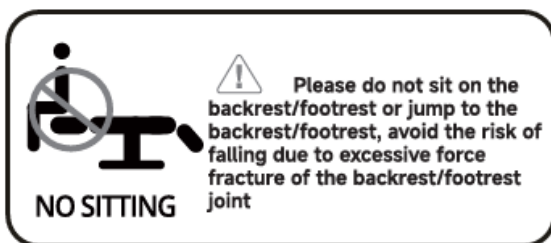

Installation Instructions

Step 1 Choose the installation location: according to the overall layout, lighting, and usage of the salon or home. Place the unit in a clean, dry, well-ventilated, and cool area to maintain a good working environment.







Step 2 Unboxing inspection: Open the outer carton and check whether the unit is intact and undamaged. If you have any questions, contact the distributor or our company immediately.

Step 3 Tattoo chair installation: Position the chair as planned. The product has been designed with overall stability in mind, so floor anchor bolts are not required. However, the rubber feet must rest on a level, solid surface to prevent accidents caused by uneven flooring. If the unit rocks or tilts due to an uneven floor, adjust the two M10×30 leveling feet under the base frame until the chair is level. During adjustment, keep the unit level and ensure the maximum number of contact points are firmly touching the floor to maintain stability.

Specifications


Product dimensions (L × W × H)	69 × 33.5 × 24.5 in
Package dimensions	51.18 × 28.74 × 26.38 in
Maximum height (upper limit)	31.83 ± 0.39 in
Minimum height (lower limit)	24.55 ± 0.39 in
Net weight	62.2 kg
Gross weight	74.2 kg
Backrest adjustment angle	0° to +70° (±2°)
Armrest adjustment angle	-45° to +45° (±1°)
Armrest sliding range	7.87 in
Leg rest adjustment angle	-75° to 0° (±2°)
Leg rest length adjustment	5.91 in
Headrest length adjustment	5.91 in
Chair rotation	360°
Rated lifting load	200 kg

Parts and Features

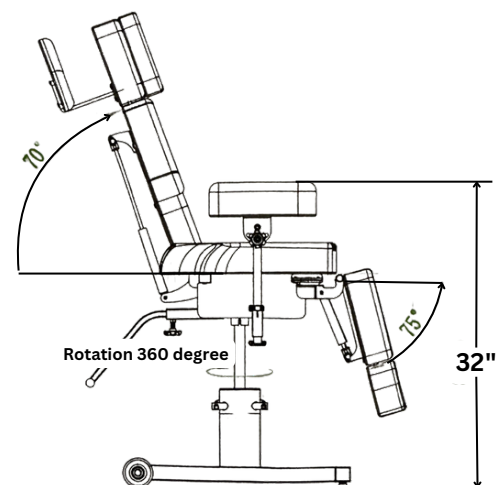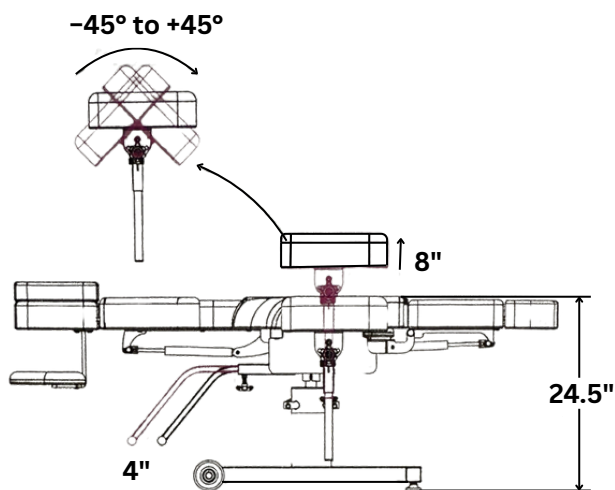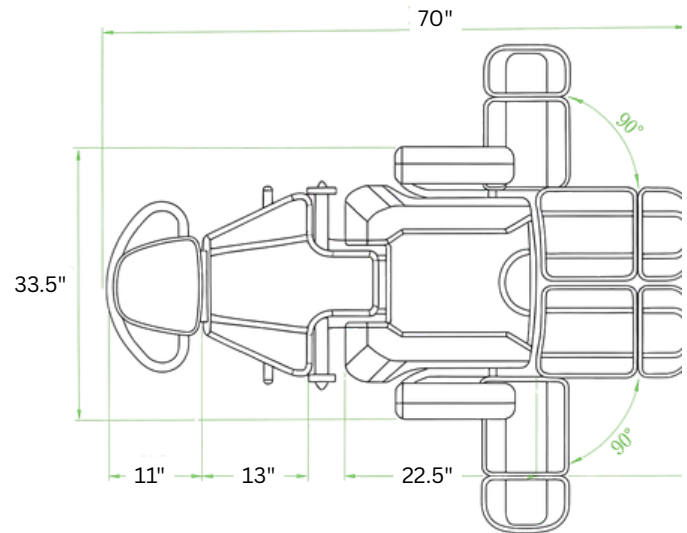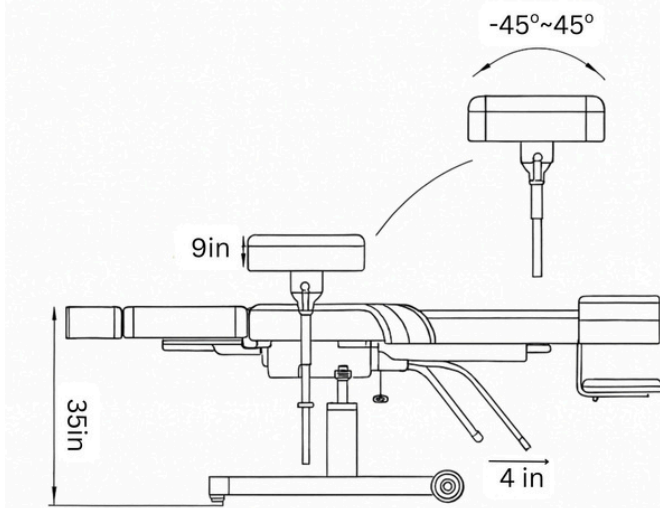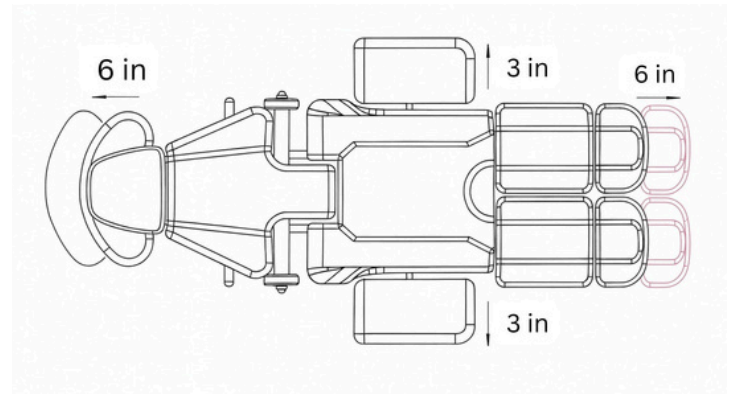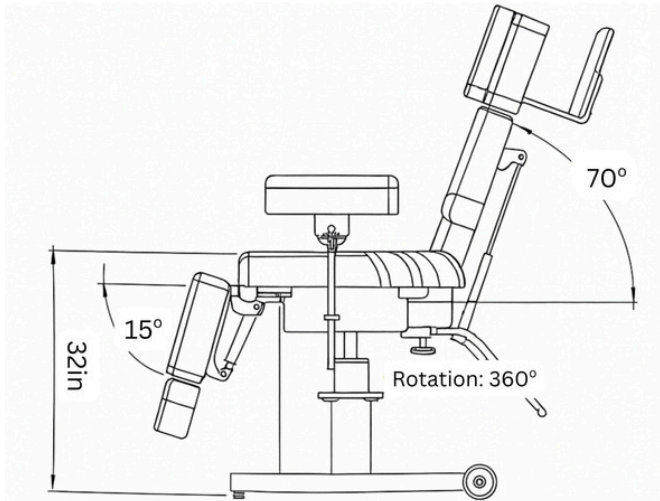

Parts and Features

1. **Headrest:** height and angle adjustable; some models allow lateral rotation.
2. **Backrest:** reclining range from upright to near-flat (range varies by model), quick-lock lever.
3. **Armrests (L/R):** height, fore-aft, rotation; flip-up or removable for access.
4. **Seat cushion/pan:** wide, supportive foam with rounded edges; some models include seat tilt/slide.
5. **Leg rests (L/R):** independent length extension, angle tilt, and splay (in/out) to position each leg.
6. **Hydraulic lift:** foot-operated pump for smooth height adjustment; release pedal for lowering.
7. **Base frame:** heavy-duty steel with wheel casters (rear) and front leveling feet.
8. **Accessory mounts:** arm boards.

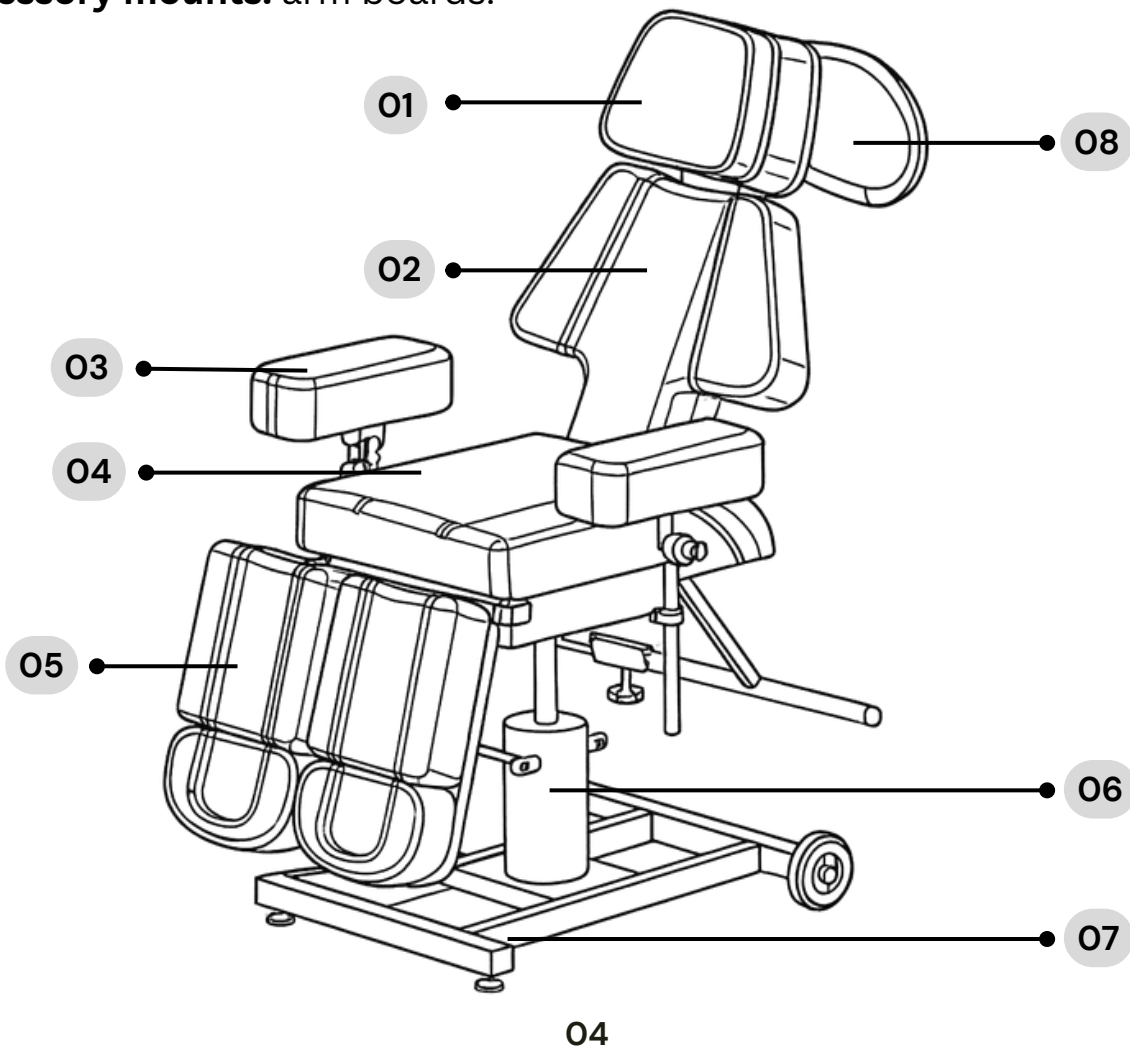

Trouble Shooting

Symptom	Likely Cause	Remedy
Chair rocks or feels unstable	Leveling feet not bearing weight; fasteners loosened	Adjust all four leveling feet until the base is firmly planted; re-torque seat/backrest bolts.
Cannot raise or lower normally	Hydraulic pump sticking	Clean the pump area and add lubricant.
	Hydraulic pump oil leak / damage	Contact distributor to replace the hydraulic pump.
Chair slowly sinks	Air in hydraulic circuit	With no load, pump fully up, then hold the release briefly to bleed air; retest. If sinking persists, stop use and contact service.
Backrest/armrest/leg rest will not lock	Lock trigger/switch out of adjustment	Re-adjust the lock or switch until it engages positively.
	Locking mechanism oil leak / damage	Contact distributor to replace the cylinder/lock parts.
Adjustment feels abnormal (sticking / uneven)	Insufficient lubrication at pivot points	Re-tighten joint clamps and apply silicone grease to pivots/slides.
	Cylinder or mechanism damaged	Contact distributor to replace the cylinder/mechanism.
Length-adjustment parts loosen over time	Knobs/screws not fully seated	Re-adjust positions and tighten all knobs/screws.
Armrest lift clamp not smooth	Quick clamp clearance not set	Re-adjust the quick-clamp size/clearance, then tighten.
Squeaks or stiffness	Debris on slides/hinges; dry pivots	Clean debris; apply a small amount of silicone-based lubricant (avoid upholstery).
Wheel doesn't roll	Hair/ink in casters	Clear residue from casters

**If problem is still not solved after above operations,
please contact Please contact distributor or manufacturer.**

Cleaning and Maintenance

After each client

- Remove covers. Clean visible soil with a neutral detergent and water.
- Disinfect touch surfaces using an approved surface disinfectant (e.g., 70% isopropyl alcohol or quaternary ammonium per local regulations). Keep surfaces wet for the label contact time.

Daily/Weekly

- Wipe dust from slides and hardware; check that all knobs/bolts are tight.
- Inspect upholstery for cuts; replace or cover any damage to maintain hygiene.
- Lubricate moving joints lightly with silicone spray where metal contacts metal (avoid PU/PVC).

Monthly

- Re-torque major fasteners (M8/M10) by hand—tighten to snug + 1/8 turn.
- Check hydraulic column for leakage; if oil is present, remove from service and report.
- **Do not use: chlorine bleach, acetone, or harsh solvents that can damage PU/PVC upholstery.**
- **Storage: cool, dry area away from direct sunlight and heaters. Use protective covers when not in use.**

Warranty and Support

- **Warranty:** This product comes with a year warranty that covers defects in materials and parts. Failure to follow recommended care will void product warranty. Consumer misuse not covered. Inspection Required. Normal wear and tear not covered. Satisfaction Does Not Apply.
- **Customer Support:** For any issues with assembly, use, or maintenance, please contact our customer service team at **+1 604 438 3399** Monday–Friday, 9:00 AM – 5:00 PM (Local Time) or email to **info@protabeauty.com**
- **Service:** If you need repairs or parts replacement, contact us for assistance.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.