
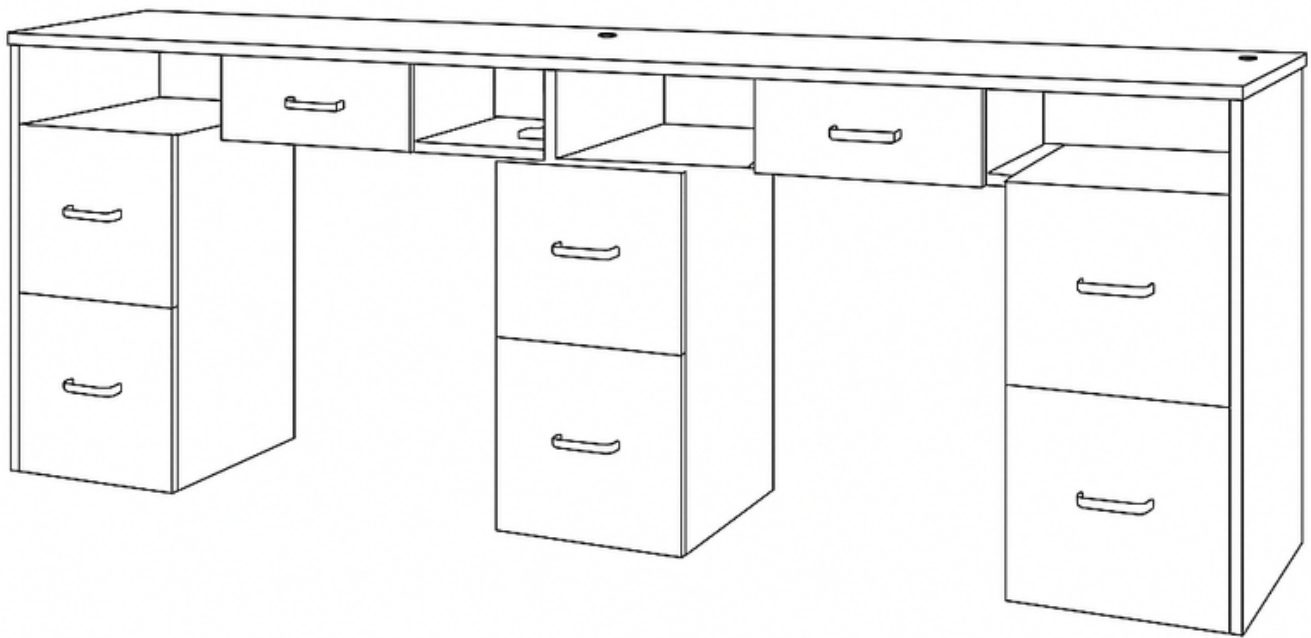


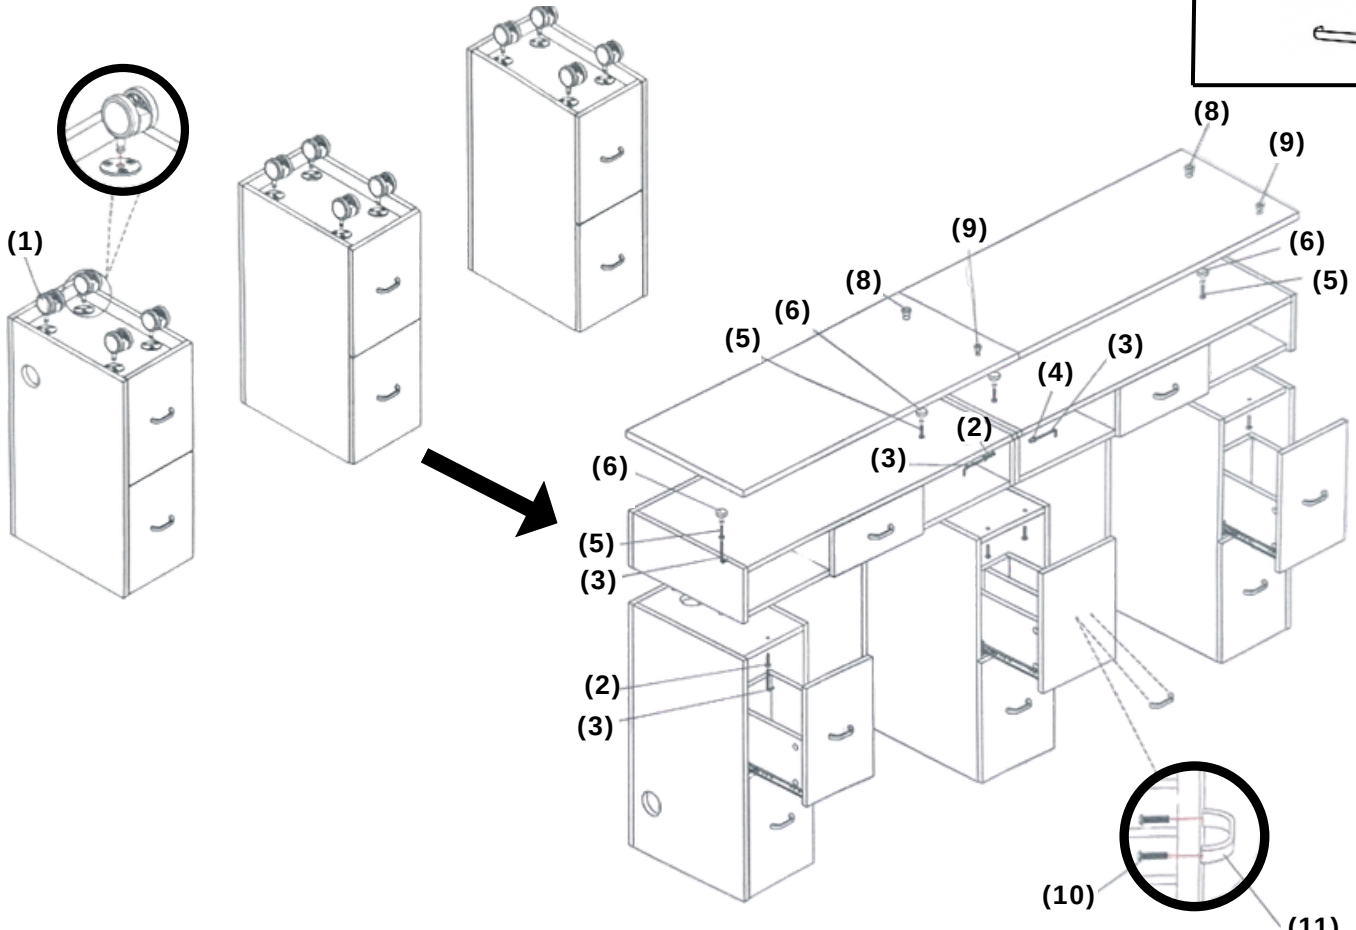

USER MANUAL **MANICURE TABLE PB-N086-2**

ASSEMBLY INSTRUCTIONS

(1) WHEELS  X12	(2) SCREW (M6*25)  X15	(3) HEX WRENCH  X2	(4) SCREW TAP  X3	(5) SCREW (M6*20)  X4
(6) ALUMINUM PIE  X4	(7) HAND REST PAD  X2	(8) BUSHING INSERT  X2 LARGE	(9) BUSHING INSERT  X2 SMALL	(10) SCREW (M4*18)  X2
				(11) HANDLE 

ASSEMBLY STEPS

1) INSTALL THE WHEELS

- Lay each pedestal (cabinet) on its back.
- Insert 1 caster into each corner of the pedestal base per pedestal, 12 total).
- Ensure each caster is fully seated and secure.
- Stand the pedestals upright.

2) POSITION THE PEDESTALS

- Arrange the three pedestals upright with drawer/door fronts facing the same direction.
- Space them roughly to match the underside of the top panel.
Leave a small gap for alignment.

3) FIT BUSHING INSERTS TO THE TOP

- On the top panel, locate the four pre-drilled through-holes.
- Press the Large Bushings (8) into the two holes "LARGE."
- Press the Small Bushings (9) into the two holes "SMALL."
- Bushings should sit flush with the surface.

4) PLACE THE ALUMINUM PLATES/BRACKETS

- Position the Aluminum Plates (6) on the top edges of the left and right pedestals where the top panel will sit (two plates per side).
- Loosely fix each plate using Screw M6×20 (5) if your model provides pilot holes.
Do not fully tighten yet.

5) MOUNT THE TOP PANEL

- With two people if possible, lower the top panel onto the pedestals, aligning bushing holes to the bracket holes.
- Insert Screws M6×25 (2) through the bushing holes and into the brackets/cabinet tops.
- Start all screws first; then tighten evenly using the hex wrench (3).
- Use the Tapping Screws (4) at the center locations shown in the diagram to secure the middle pedestal to the underside of the top. Do not overtighten.

6) INSTALL THE HAND-REST PADS

- Align each Hand-rest Pad (7) with the pre-drilled positions on the top.
- Fasten as shown in the diagram—use the existing holes through the bushing inserts for clean alignment.
- Tighten until snug. Do not compress the pads excessively.

7) INSTALL THE HANDLE (IF APPLICABLE)

- Identify the drawer/door that ships without a handle.
- From inside the drawer/door, pass the M4×18 screws (10) through the two handle holes.
- Attach the Handle (11) on the outside and tighten with a screwdriver until secure.

FINAL CHECKS

- Confirm all screws are tight and the top is level.
- Ensure drawers/doors open smoothly and casters roll freely.
- Wipe away fingerprints and debris with a soft cloth.

CARE & USE

- Avoid standing or sitting on the top.
- Clean with a damp cloth and mild soap; do not use abrasives.
- Periodically re-check screw tightness, especially after the first week of use or relocation.
- If anything doesn't align as expected, loosen, realign, and retighten rather than forcing parts together. For support, contact your seller with your model number and a photo of the hardware layout.

