
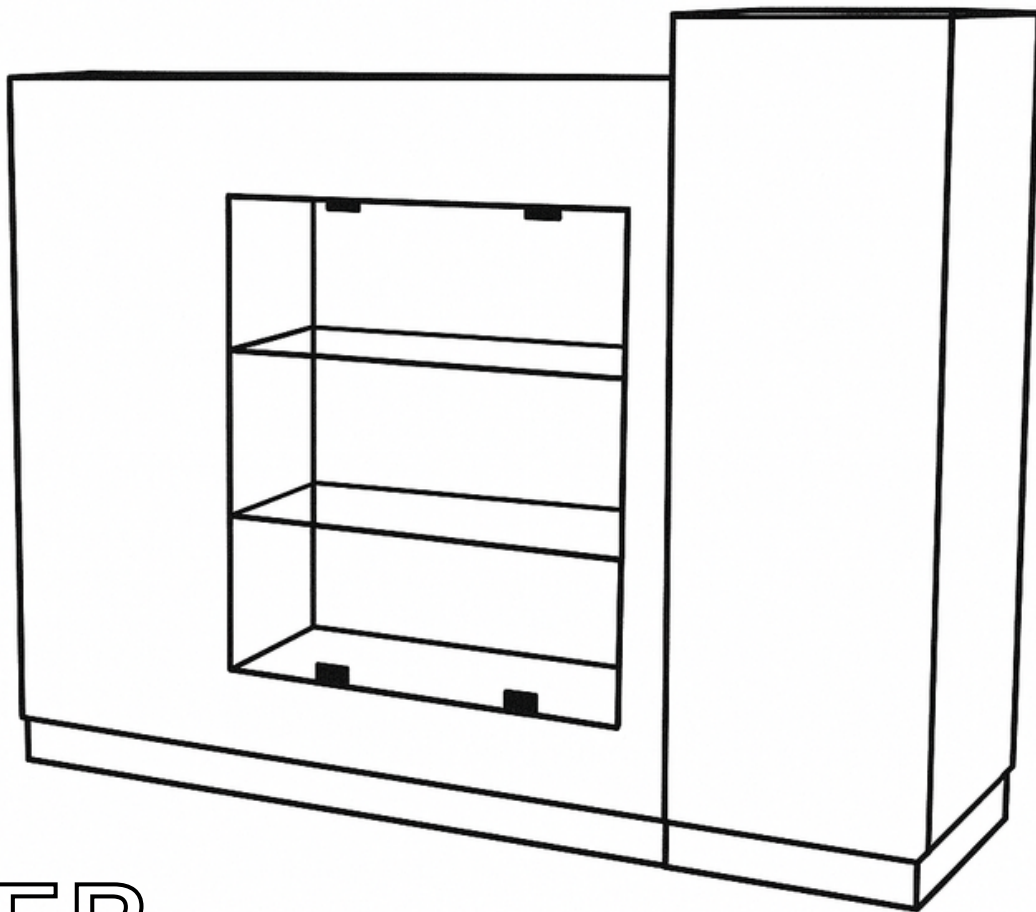
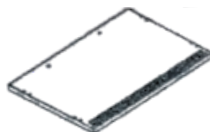
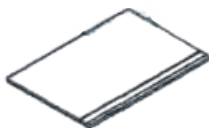


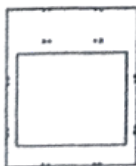


USER MANUAL **RECEPTION DESK PB-R012**

ASSEMBLY INSTRUCTIONS


A 	B 	C 									
D 	E 	F 									
G 	H 	I 									
M 	J 	K 									
	L 										
(1) CAM LOCK NUT  X22			(2) CAM DOWEL  X22			(3) DOWEL  X18			(4) SCREW(M4*25)  X4		
(5) SCREW(M6*25)  X10			(6) SCREW TAP  X8			(7) HEX WRENCH  X2			(8) SUPPORT PEG FOR GLASS  X8		

ASSEMBLY INSTRUCTIONS


Step 1 Instruction: B → C → D → A → E → F

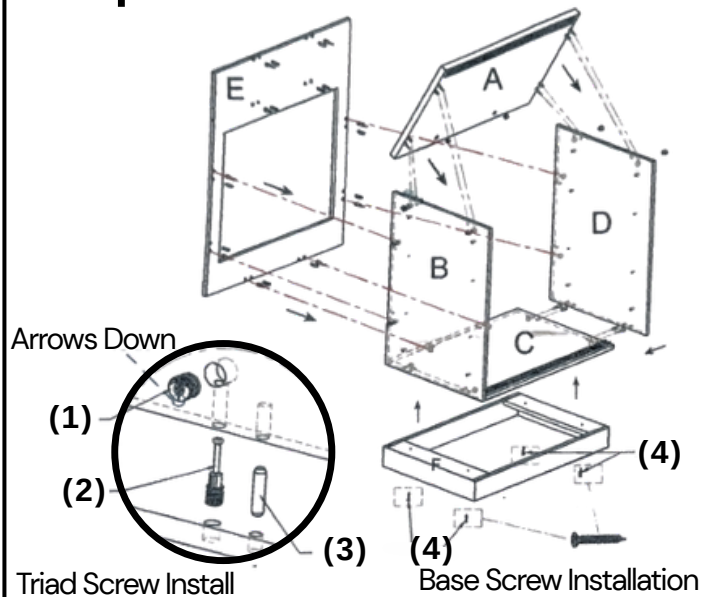


Step 2 Instruction: □ → H → G → I → J

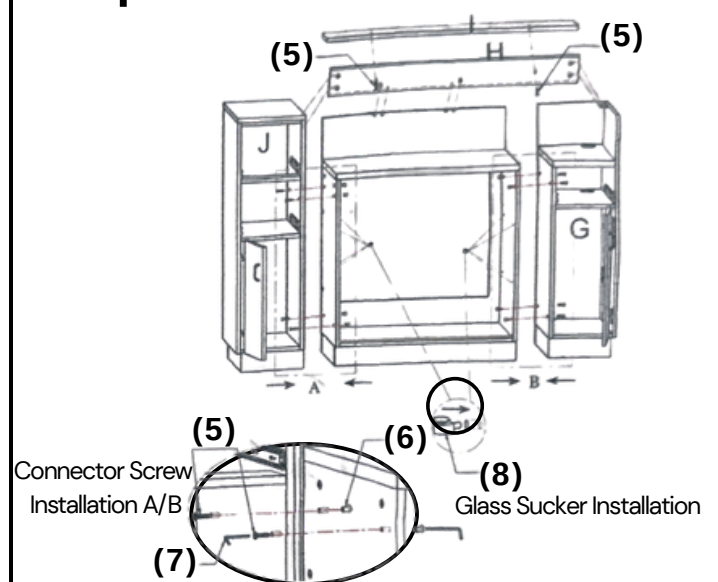

Step 3

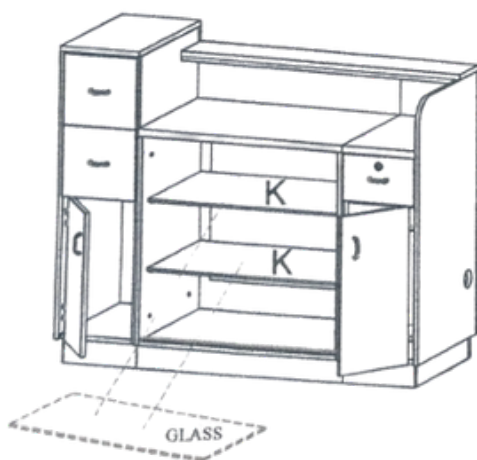

Step 4

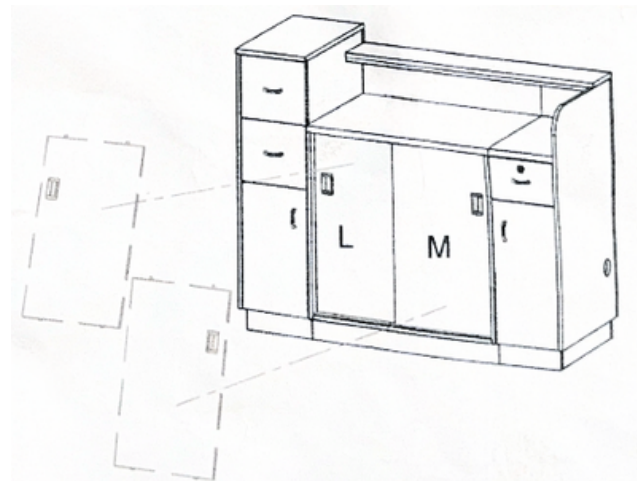

ASSEMBLY STEPS

STEP 1 — BUILD THE CENTER UNIT

1. Instruction order on the sheet: B → C → D → A → E → F
2. Install cam bolts (1) into the side panels B and D and top A where indicated. Insert dowels (3) where shown.
3. Place base panel C on the floor (finished face up).
4. Stand side panel B onto the base; align dowels/bolts with the holes in C. Lock the cams (2) clockwise.
5. Repeat for side panel D.
6. Fit the top panel A onto B & D; lock all cams (2).
7. Slide in the back panel E and secure with provided fasteners.
8. Fix the front rail F to complete the center carcass.
9. Where the drawing shows “Base Screw Installation (4),” drive the base screws (4) up through the underside into the base/top as indicated.
10. Tip: Keep all cam locks only snug until the unit is square, then tighten fully.

STEP 2 — JOIN THE THREE CABINETS

1. Instruction order on the sheet: (Top strip) → H → G → I → J
2. Position the left tower J, center unit (built in Step 1), and right tower G upright, faces aligned.
3. Place the bridge cabinet I between the towers against the back of the center unit (per drawing).
4. Use the connector screws (5) and fittings (6)(7) shown in the zoomed inset to tie the units together:
5. Install the connector bolts in one cabinet, align the adjacent cabinet, then tighten the mating cams/locks.
6. Fit the riser/top cap H across the back edge as shown.
7. Press the glass suckers/shelf pegs (8) into the holes that will support the glass/shelves later.

STEP 3 — FIT SHELVES & GLASS

1. Place the adjustable shelves K onto their pegs inside the center unit.
2. With two people, set the glass panel onto the suckers/pegs indicated by the dashed outline. Make sure it is fully supported and level.

STEP 4 — DOORS & FINAL TOP

1. Hang doors L and M on their hinges (left/right). Adjust hinge screws so gaps are even.
2. Place the final top/cover A (or the labeled top piece on your model) and fasten from below where indicated.
3. Install handles if supplied, then check that drawers/doors open and close smoothly.

FINAL CHECKS & CARE

- Verify all cam locks are fully turned and connector screws are tight.
- Ensure the cabinet sits level; adjust feet if fitted.
- Clean with a soft cloth; avoid abrasives.
- Re-tighten hardware after the first week of use or after moving.

PRODUCT DIMENSION

