


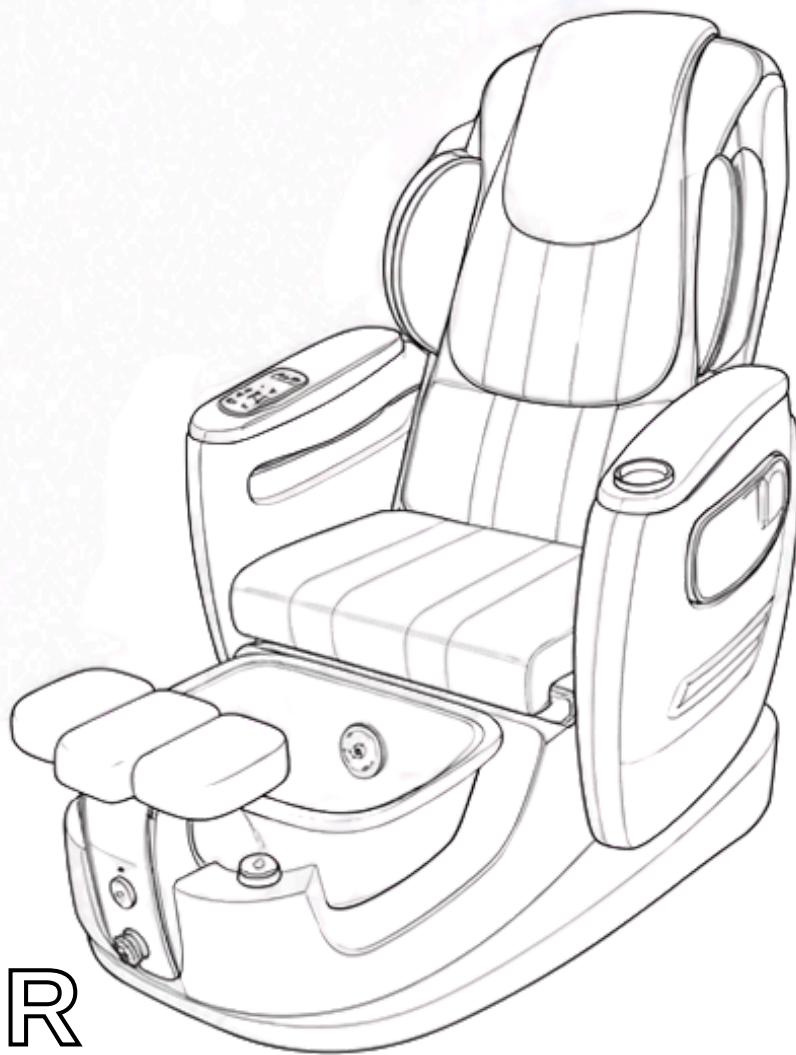

USER
MANUAL
**LUXURY SPA
MASSAGE CHAIR
MODEL-Y**

All rights reserved.

Printed in Canada

TABLE OF CONTENTS

1. INTRODUCTION	01
2. SAFETY PRECAUTIONS	01 – 03
3. CONSIDERATION	04
4. PARTS AND FEATURES	05-07
5. INSTALLATION INSTRUCTIONS	08-09
6. METHOD OF USAGE	10-12
7. OPERATING INSTRUCTIONS	13-17
8. CLEANING AND MAINTENANCE	18-19
9. TROUBLE SHOOTING	20
10. WARRANTY AND SUPPORT	21

Please read this manual carefully before using the product to ensure safe and optimal use.

Our company reserves the right to improve design and modify the products without prior notice.



Introduction

Thank you for purchasing our Pedicure Chair. This chair is designed to offer comfort and functionality, ensuring a premium experience for both clients and technicians. The chair includes features such as adjustable positioning, built-in foot bath, and ergonomic design, making it perfect for professional nail salons or home use.

Safety Precautions

Before using the pedicure chair, please follow these safety guidelines:

- **Electrical Safety:**

1. Use a properly grounded 120V outlet, and ensure the plug fits snugly into the outlet.
2. An appliance should never be left unattended when plugged in.
3. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
4. Keep the cord away from heated surfaces.
5. Contact a certified electrician if in doubt about electrical connections.

- **Water Safety:**

1. Never submerge electrical components, including motors and switches, in water.
2. Always check for leaks before use.

- **Load Capacity:**

1. The chair has a maximum weight capacity.
2. Do not exceed the weight capacity of 350 lbs (160 kg) to prevent damage to the chair or injury.

- **Child Safety:**

1. Keep children, pets and unauthorized individuals away from the equipment.

- **Adjustments:**

1. Always adjust the chair while the user is not seated to avoid injury.
2. Do not carry this appliance by supply cord or use cord as a handle.

Safety Precautions

- **Maintenance:**

1. Always turn off and unplug the chair before performing any maintenance or cleaning tasks.
2. Do not operate where aerosol (spray) products are being used or where oxygen
3. is being administered.

- **General Safety:**

1. Only qualified personnel should install or service this chair.
2. Always disconnect power before performing maintenance or cleaning.
3. Do not use the chair if it has been damaged or is malfunctioning.
4. Keep water and cleaning solutions away from electrical components.
5. Indoor use only.
6. To disconnect, turn all controls to the off position, then remove plug from outlet.
7. Never drop or insert any object into any opening.
8. Keep long hair away from massager while in use.

The requirements for installing a pedicure chair in Canada would involve the following:

1. Plumbing Requirements:
 - Access to both hot and cold water supply lines.
 - Proper drainage system installation to handle wastewater.
2. Electrical Requirements:
 - Adequate electrical outlets with appropriate voltage and safety compliance.
 - Ground-fault circuit interrupters (GFCI) to ensure safety.
3. Building Code Compliance:
 - Meet local building codes and health regulations for salon equipment installation.
 - Obtain necessary permits if required by municipal regulations.
4. Space Consideration:
 - Sufficient space around the chair for ease of movement and client comfort.
 - Ensure the chair is securely anchored, if needed, for stability.
5. Health and Safety Standards:
 - Compliance with hygiene and sanitation standards set by relevant authorities.
 - Use approved materials that are easy to clean and disinfect.
6. Professional Installation:
 - Engage certified plumbers or electricians for installation to meet professional standards.


Connect this appliance to a properly grounded outlet only. See Grounding Instructions.

Safety Precautions

Grounding Instructions

- This product must be properly grounded. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current, reducing the risk of electric shock.
- This product is equipped with a cord that includes an equipment-grounding conductor and a grounding plug. The plug must be connected to an appropriate outlet that is correctly installed and grounded in accordance with all local codes and ordinances.
- Consult a qualified electrician or service technician if you are unsure whether the product is properly grounded.
- Do not modify the plug provided.
- This product is intended for use on a nominal 120-volt circuit and has a grounding plug.

This product is designed for use on a nominal 120-volt circuit and is equipped with a grounding plug, as illustrated in Sketch A. A temporary adapter, as shown in Sketches B and C, may be used to connect this plug to a 2-pole receptacle (see Sketch B) if a properly grounded outlet is not available. The temporary adapter should only be used until a properly grounded outlet (Sketch A) can be installed by a qualified electrician. The green-colored rigid ear, lug, or similar part extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box cover. Whenever the adapter is used, it must be secured in place with a metal screw.

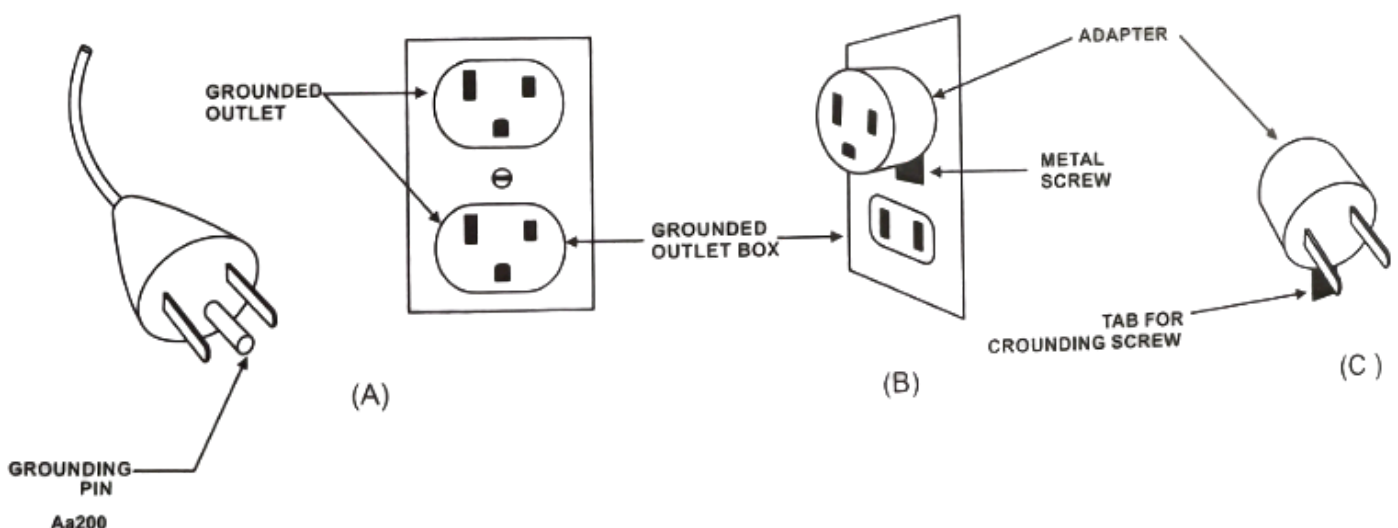

Consideration

Water Supply

All plumbing connections must conform to local codes. Water supply (Water heater) to the spa should be provided with adequate water pressure and water temperature. Refers to the water heater manufacturer's recommendations to set temperature.

Water pressure

To fill the basin correctly up to level, Normal water pressure of 30 to 80 P.S.I is required.

Water temperature

Excessive water temperature is dangerous and should be checked before use. Maximum water Temperature should not exceed 102-104 Degrees F, (39~40 degrees C)

Recommend Hot water temperature at 98 ~ 100 degrees F (37~38 Degree C) for Children, the elderly and handicapped person are generally more at risk because they generally have reduced ability to react.

Adjust your hot water accordingly. For hot and cold water supply fittings and drain fittings location, see below diagram .Carefully connect the water supply line to the appropriate fittings located on the rear of the pedicure spa.

Pressure / Temperature (Faucet Specs)

Maximum Pressure: 150 psi (10 bars)

Minimum Pressure: 10 psi (69kPa)

Working Temperature: 33F to 140F constant; intermittent to 180f
(0.6C to 60C sustained; intermittent to 82.2C)

Recommended Flow: 1.5gpm

UL LISTED / CE CERTIFIED

Compliance with following Code (s): Uniform Plumbing Code, National Plumbing Code of Canada and international Plumbing Code.

Also, Compliance with following Standard (s):

File#11354, ASME A112.18.2-2020 / CSA B125.2-20

File#12377, ASME A112.18.1-2018 / CSA B125.1-18



CONFORMS TO UL
STD.1647
CERTIFIED TO CSA
STD. C22.2 No.68


ASME - American Society of Mechanical Engineers, CSA - Canadian Standard Association IAPMO - International Association of Plumbing and Mechanical Officials, UL - Underwriters Laboratory

Parts and Features




Specifications

Feature	Specification
Electrical Rating	AC120V, 60Hz, 80W, 1.4A
Basin Capacity	4.5 US Gallons
Jet System	Dura Jet: 120V, 60Hz, 50W Magna Jet: 120V, 60Hz, 30W
LED Lights	Input: 120V AC, 60Hz, 70mA Output: 12V AC, 250mA
Discharge Pump (Optional)	120V, 60Hz, 80W
Flow Rate	6 gallons per minute (GPM)
Backflow Prevention	Optional - 3/8" Dual Check Valve, 150 psi / 180°F On/Off Air Switch for Jet

- **Dimensions:** 58"x50"x55"
- **Weight:** 150lb
- **Weight Capacity:** Up to 350lb
- **Plumping Source:** Hot/ Cold Water $\frac{3}{4}$ inches (fitting provided) ; Drain 1 $\frac{1}{2}$ inches
- **Discharge Pump Model:** BPX401-7L
- **Color Options (Seat leather & Stool) :** Black/ Cream / Light Grey/ Chocolate



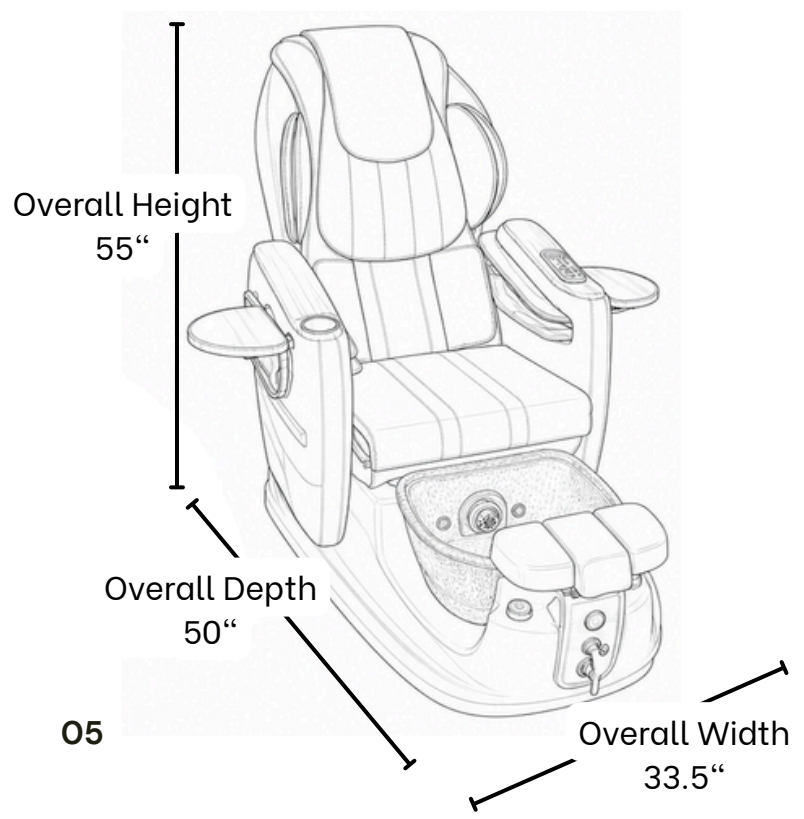


Parts and Features

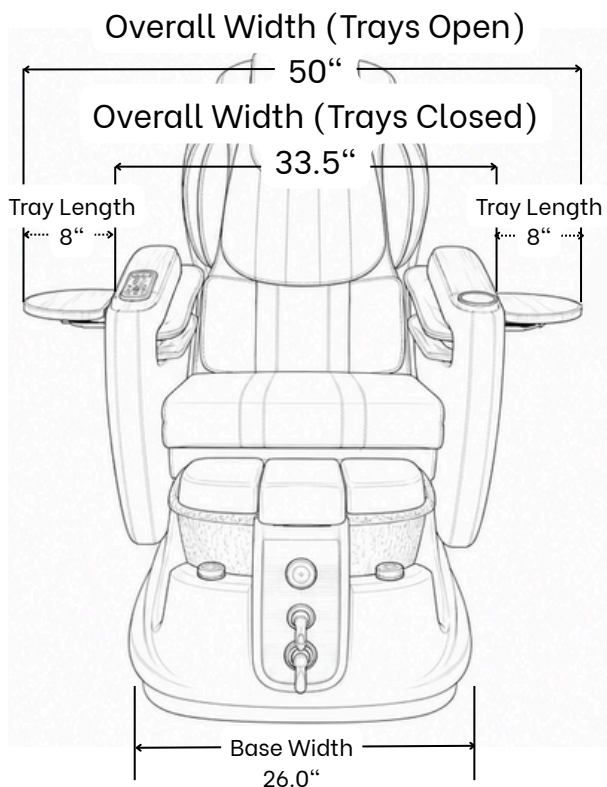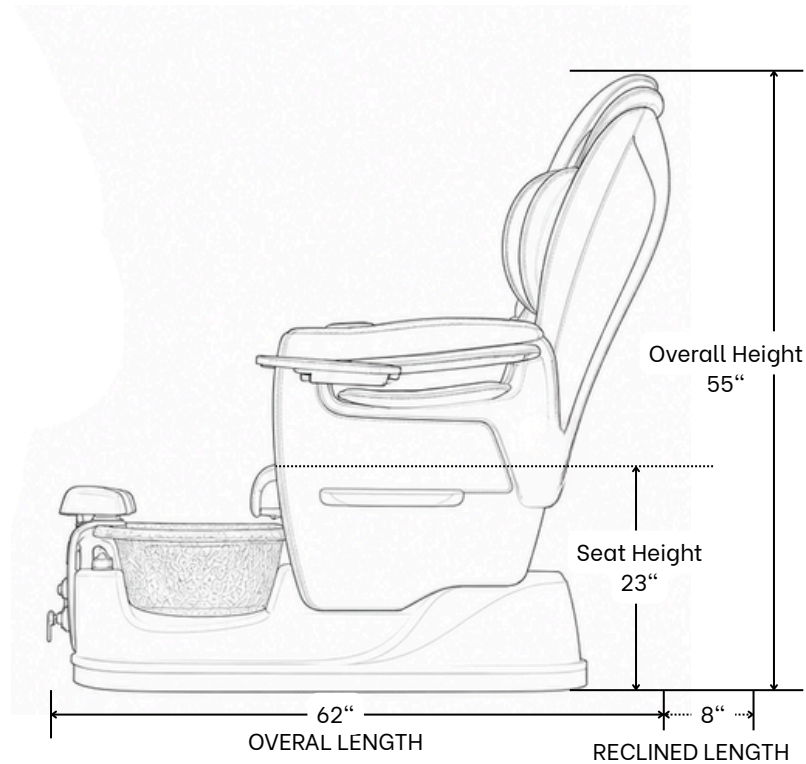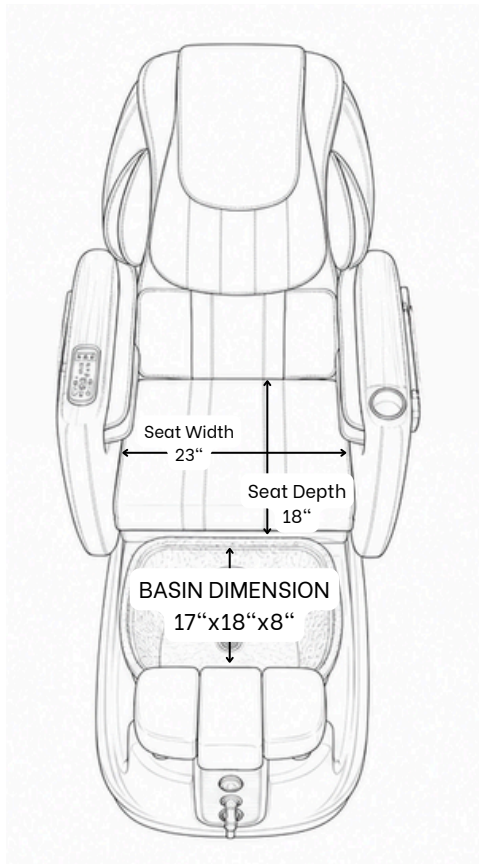

Parts and Features

1. Headrest Cushion
2. Shoulder Airbag Assembly
3. Backrest with Massage
4. Massage Remote
5. Arm Airbag Assembly
6. Seat Cushion
7. Footrest
8. Jet Control (ON/OFF)
9. Drain Control (UP/DOWN)
10. Drain Control (ON/OFF)
11. Water Temperature Control
12. Seat Adjustment
13. Armrest Decoration (Light)
14. Cup Holder
15. Folding Tray
16. Wireless Recharge Station
17. Waist airbag
18. Magnet Jet
19. Shower Head
20. High Temperature Glass Basin
21. Drain

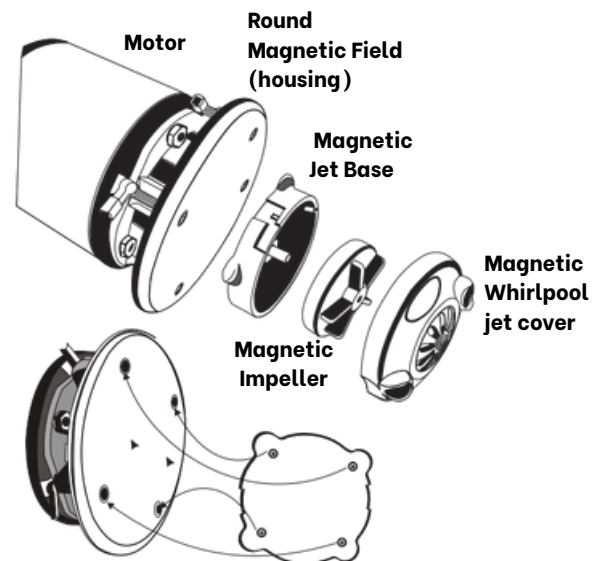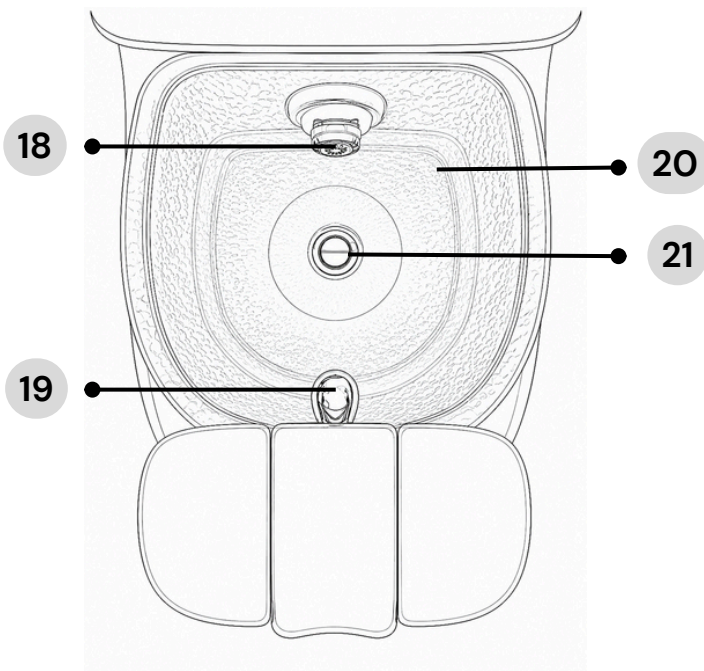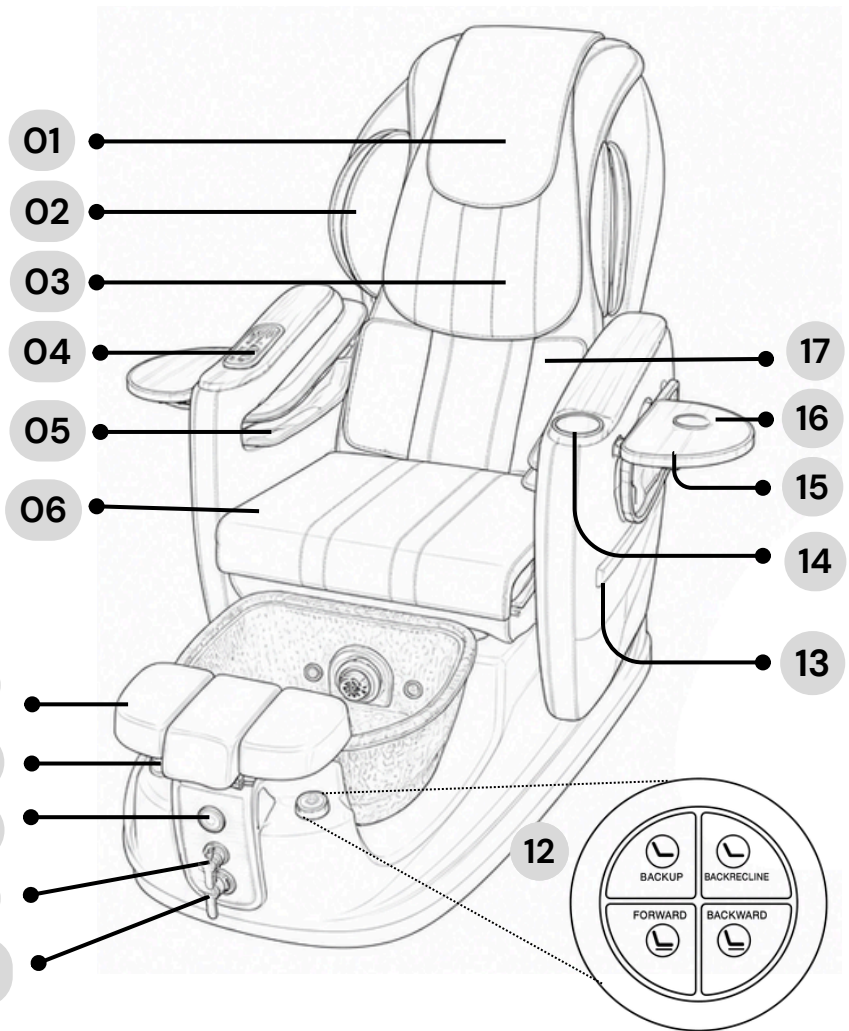


**Magnetic
Pipe-Less Motor**


Installation Instructions

(1) Installation of Armrests

1. Insert the swivel shaft of the backrest into the archway slot of the seat frame.
2. Attach the backrest hook to the electric cylinder pin shaft.
3. Align the two anti-detachment plates of the rotating shaft with the clamping groove. Secure them in place using 4 pcs M4 × 8 cross groove pan head self-tapping locking screws.

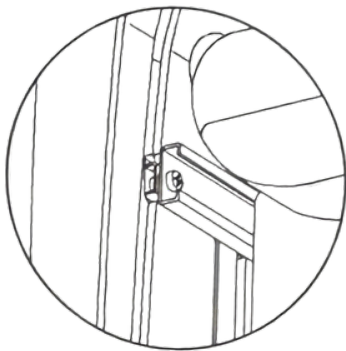

(1)

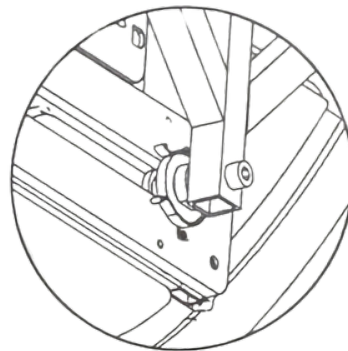


(2)

(2) Installation of Backrest


1. Insert the swivel shaft of the backrest into the archway slot of the seat frame.
2. Attach the backrest hook to the electric cylinder pin shaft.
3. Align the two anti-detachment plates of the rotating shaft with the clamping groove. Secure them in place using 4 pcs M4 × 8 cross groove pan head self-tapping locking screws.



(1)

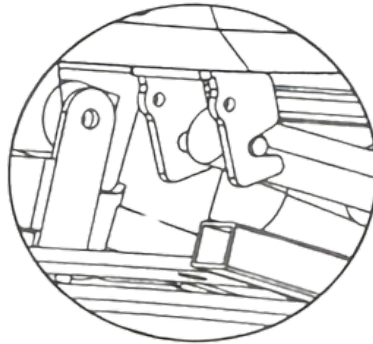

(2)

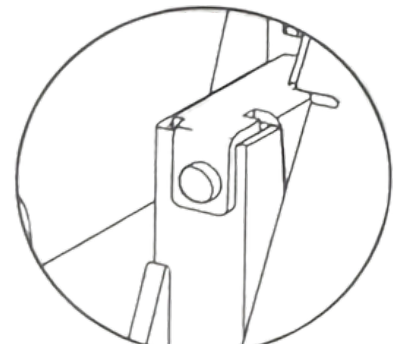


(3)

Installation Instructions


(3) Tray Installation

Use 16 pcs GB/T 818 M4 × 12 cross recessed pan head screws (black zinc, environmentally friendly) to install the left and right tray assemblies.

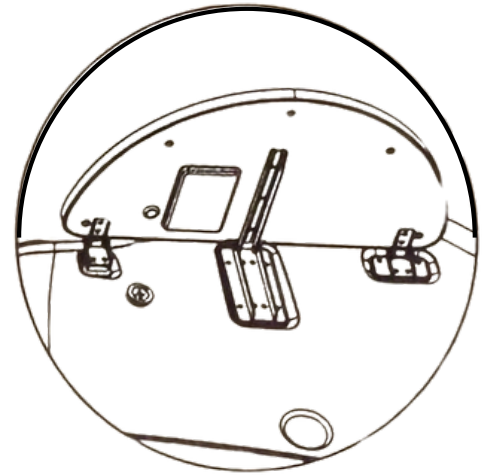

⚠ Caution


1. Proper Operation
2. Before using the controller, ensure that the backrest electronic cylinder is securely connected with the pin that fixes the backrest.
3. When Cylinder is Not Connected
4. If the backrest electronic cylinder is not connected with the fixing pin, hold the electronic cylinder to prevent it from touching the ground when operating the controller.
5. During Debugging and Installation
6. Before operating the controller, confirm that the backrest electronic cylinder is securely connected with the fixing pin.
 - If not properly connected, after shutting down the switch, the front part of the electronic cylinder may strike the board under the seat frame.
 - This may cause distortion of the seat frame rail, force the rail out of alignment, or even damage the steel-ball railway.

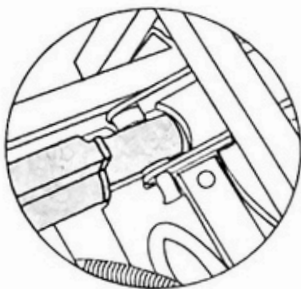

(1)



(2)

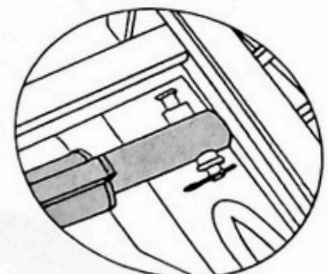

(3)

Method of Usage

Operation Sequence

Switch On Power




1. Insert the plug into the socket outlet.
2. Turn on the power button located behind the armrest.

Massage

1. Select the desired massage function according to the control instructions.

Switch Off Power


1. Stop the massage.
2. Turn off the power button located behind the armrest.
3. Remove the plug from the socket outlet.

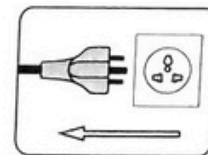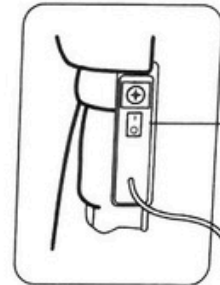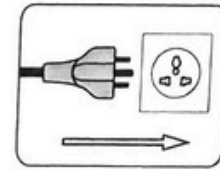

Attaching or Detaching the Pillow Pad and Back Cushion

- The pillow pad and back cushion (recommended) reduce the kneading intensity on the neck and shoulders.
- You may choose to use them or remove them depending on your personal preference.
- The pillow pad and back cushion are connected by a sticker fastener.

⚠ Warning: In case of danger, do not remove the cushion.

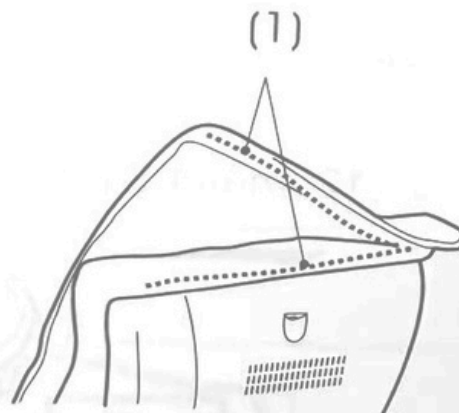

Method of Usage

To Adjust the Backrest


To recline the backrest, press and hold the down arrow (▼) button on the controller. The backrest will slowly move backward.

Release the button to stop and hold the position.

To raise the backrest, press and hold the up arrow (▲) button on the controller. The backrest will slowly move forward (upright).

Release the button to stop the movement.

WARNING: Do not apply any external pressure on the backrest while it is rising, other than the natural weight of your body.


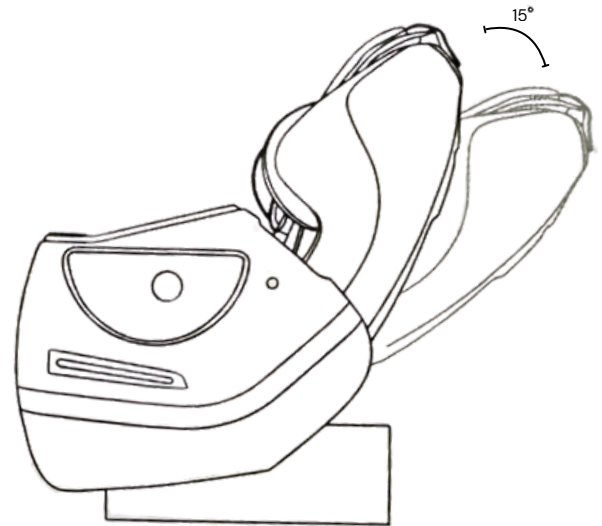


To Adjust the Seat Frame

The seat frame adjustment allows you to set the most comfortable height for calf massage.


You can move the seat frame forward or backward to match your leg length.

The maximum adjustment distance is 120 mm (4.2 inches).

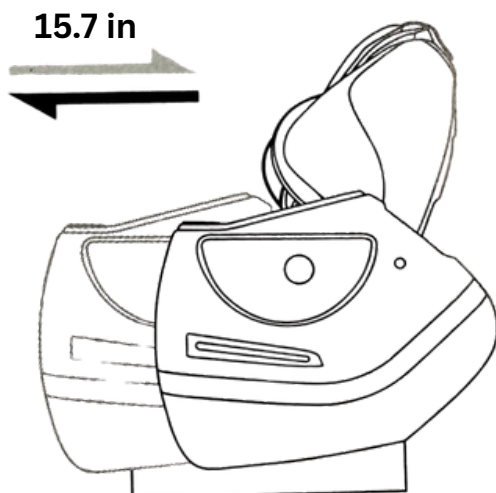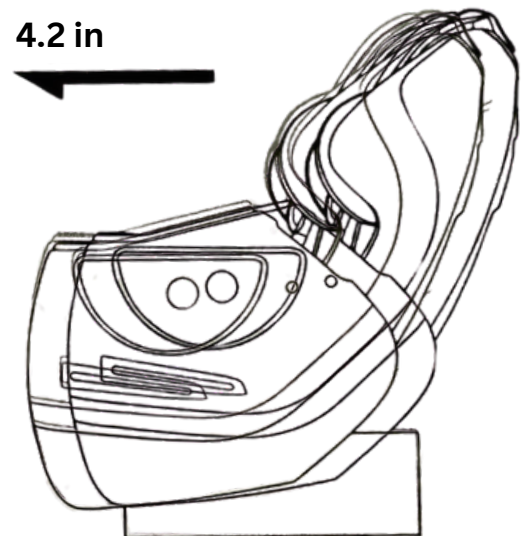

The armrest can slide forward and backward up to 15.7 inches.


Method of Usage

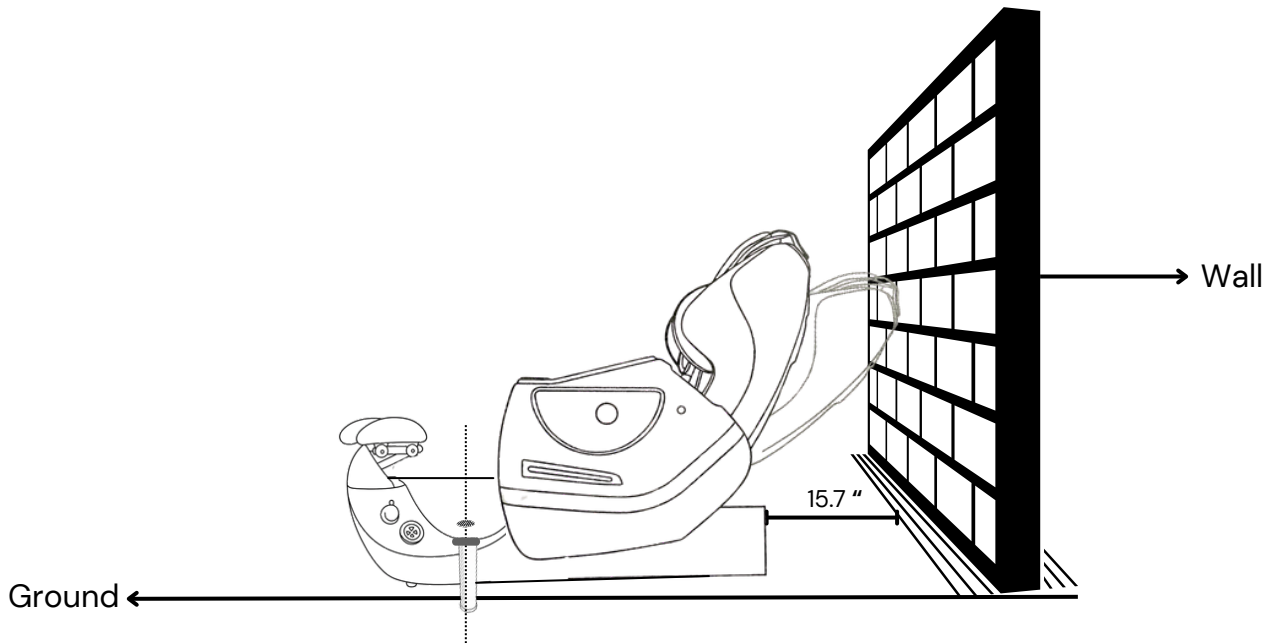

To fully recline the pedicure chair, the base of the unit must be positioned at least **35 inches** away from the wall.

Please check your local plumbing and electrical codes. Installation of this pedicure spa must comply with both. You must hire a licensed plumber and a licensed electrician to complete the necessary connections to your pedicure spa.


NOTE: Failure to comply with federal, state, or local codes will void the warranty.

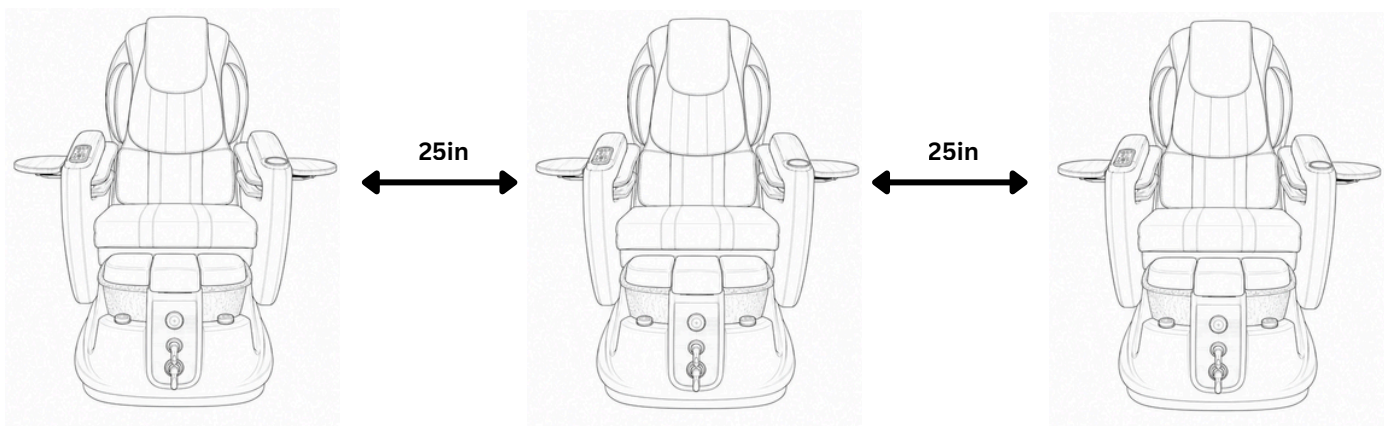

Keep a 25-inch gap between two chairs.

Operating Instructions

Massage Chair Remote and Features

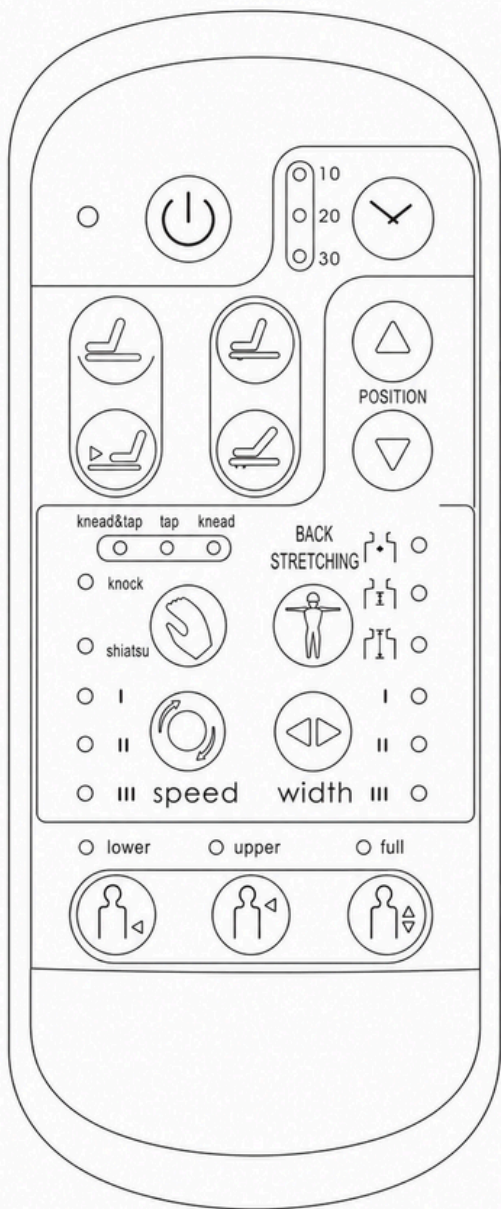

Designed with a four-wheel driven silent massage mechanism that moves smoothly up and down along the backrest.

The system is programmed with five types of simulated massage functions: Shiatsu, kneading, flapping, knocking, and synchronous kneading & flapping.

It features both manual and automatic control modes for the upper body.

- In automatic mode, it offers three preset massage combinations: lower back, upper back, and full back.
- In manual mode, it provides three selectable areas: overall, fixed, and partial. Under the fixed mode, the massage hands can be moved up and down manually.

Each massage function offers five adjustable speed levels.

The width between the two massage hands can also be adjusted in three levels — wide, medium, and narrow — when operating in flapping, Shiatsu, or knocking modes. The chair is equipped with air pressure massage functions, including shoulder, arm, waist, and buttocks air massage.

Additional features include:

- Seat frame forward and backward movement
- Backrest reclining and declining adjustment
- Bathtub adjustment button to move the tub forward or backward and freely adjust the backrest angle
- Built-in wireless charging station
- Automatic restoration of massage hands to their original position after the machine is turned off

Operating Instructions




1. Controller operate

Button	Adjust massage balls
	To start or stop massage of the upper body

(1) Auto Massage

Button	Adjust massage balls
	To carrying on automatic massage around the upper back mainly.
	To carrying on automatic massage around the lower back mainly.
	Adopt the various tactics to carry on automatic massage to different position of the full back of the body, the massage position covers the whole full back.

(2) Upper body manual massage

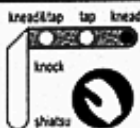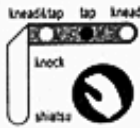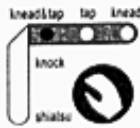Button	Function	Display status	Adjust massage balls
 Method	Knead		Speed
	Tap		Speed, Width
	Kneading & Flapping		Speed
	Knock		Speed, Width
	Shiatsu		Speed, Width

Operating Instructions

Speed		For speed and massage treatments selection, five speed options available. the indicators are as follows (black stands for on)	 1  2  3  4  5
Width		Width: when massage treatment of flapping, shiatsu, or knocking has been chosen, press this button to adjust the width of the massage hands, three options, not available under auto kneading state.	 narrow  mid  wide
Back Stretching		Upper body (overall) trip massage	
		Small area (partial) trip massage	
		Fixed position (fixed) massage	
Position		When fixed massage has been chosen, press this button to move the massage device downward to suit precise massage points, not available under auto state.	
		When fixed massage has been chosen, press this button to move the massage device upward to suit precise massage points, not available under auto state.	

(3) Other manual function

Timing		Three modes of timing: 10 mins, 20 mins and 30 mins.
--------	---	--

(4) Adjust angle of backrest and footrest

Seat	 Forward	Press this button continually and the seat frame will move forward, loose your finger and the movement will stop.
	 Backward	Press this button continually and the seat frame will move backward, loose your finger and the movement will stop.
Back	 Recline	Press this button continually and the backrest frame will move upward, loose your finger and the movement will stop.
	 Incline	Press this button continually and the backrest frame will move downward, loose your finger and the movement will stop.

Operating Instructions

11. Manual Position Control:

- Press and hold the button to move the massage hand upward.
- Press and hold the button to move the massage hand downward.

12. Air Pressure Massage Mode


- Air mode: Three airbag mode switch buttons are available.
- Air Intensity: Three levels of intensity can be adjusted: Low, Medium, High.
- Time: allows you to set the desired massage duration.

13. Power Off / End Massage

- During the massage, turning off the power switch will:
 1. Lift the backrest frame.
 2. Reset the massage hand.
 3. Stop all massage functions.

Seat Frame Adjustment

The flexible seat frame adjustment function allows customization based on the user's height. This ensures optimal positioning of the calf airbags for effective massage. The seat frame can move forward and backward up to a maximum distance of 400 mm (15.75inch) .

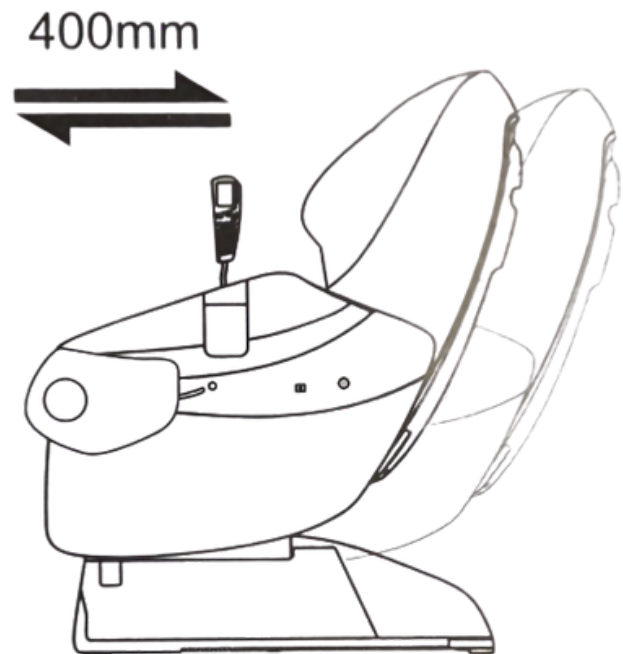

Operating Instructions

Foot Basin Use

Before First Use:

- Clean and disinfect the basin according to the instructions.

Filling the Basin:

1. Turn the overflow knob counterclockwise until it stops to close the drain.
2. Lift the hot & cold mixer handle to start the water flow.
 - Turn it counterclockwise for cold water (blue mark).
 - Turn it clockwise for warm water (red mark).
3. Fill the basin with water not exceeding the 4.5-gallon capacity.
4. Check water temperature before use to avoid burns.
5. Push the handle down to stop the water.
6. Press the jet button to turn on/off the whirlpool.

Draining the Basin:

- Make sure the jet system is turned off.
- For floor drain: Turn the overflow knob clockwise to open the drain and let the water exit.
- For drain pump system (optional):
 - Turn the overflow knob clockwise to open the drain.
 - Wait for the basin to fully empty.
 - The drain pump will shut off automatically after 2 minutes.
 - If the water drains completely before 2 minutes, turn off the pump manually to prevent overheating.
- **Do not run the pump longer than 10 minutes.**
- If using a wall drain, be sure to close the drain cap after every use to avoid contamination.

WARNING: It is very important to clean the pedicure spa thoroughly. Failure to clean properly can lead to serious health issues for clients and technicians. It may also cause the unit to malfunction. Always follow local and state guidelines for cleaning pedicure spas.

Cleaning and Maintenance

Basin Cleaning Procedures

WARNING:

Before cleaning, check your local and state regulations for any specific disinfecting requirements for spas. In addition to local rules, it's very important to follow the steps below to keep the spa clean and safe after each use.

The manufacturer and supplier are not responsible for any infections or illnesses caused by improper cleaning or not following sanitation guidelines.

After Each Customer

1. Turn the suction cover counter-clockwise to remove it. Spray with water to clean out any debris.
2. Spray disinfectant on the impeller.
3. Spray disinfectant on both sides of the suction cover.
4. Use disinfectant wipes to clean the inside of the spa tub, footrest, and armrests.
5. Use the wipes again to clean the rest of the spa basin.
6. Wait 10 minutes to let the disinfectant do its job.

Sanitize at the End of the Day

1. Turn the suction cover counter-clockwise to remove it.
2. Clean the suction cover with a soft brush and water.
3. Clean the impeller the same way, then put the suction cover back by turning it clockwise.
4. Fill the tub with water. Add 1 level scoop of Pedi-Clear disinfectant crystals (or another EPA-approved cleaner).
5. Run the spa for 10 minutes, then let the solution sit overnight.
6. The next morning, drain the water. Use disinfectant wipes to clean the inside of the basin.
7. Clean the rest of the spa tub with disinfectant wipes.
8. The spa is now ready for the first customer of the day.

DO NOT use soak overnight with chlorine or any strong chemicals. This can damage the product and void the warranty.

Cleaning and Maintenance

Care & Maintenance

1. Unplug the chair before cleaning.
2. Do not use benzene, thinner, or other strong chemicals on the chair.
3. Use a vacuum to remove dust from the backrest and armrests.
4. If the chair gets dirty, clean with a damp cloth, then dry with a clean cloth.
5. For tough stains, you may use mild upholstery cleaners.
6. Clean the controller and power switch with a dry cloth only—never use a damp cloth.
7. Do not insert any foreign objects between massage nodes or inside the unit.
8. Lubricate the drive shaft every 6 months.
9. If not using the chair for a long time:
 - Cover it
 - Coil the power cord
 - Store it in a dry, dust-free area
10. Do not store near heat or open flames, and do not leave it in direct sunlight for long periods—this may cause fading or damage.

1 Daily Maintenance

- Wipe down all surfaces with a disinfectant-safe cloth.
- Disinfect the foot basin after each use using EPA-registered solutions.
- Dry all surfaces to prevent mold and mildew buildup.

2 Weekly Maintenance

- Inspect plumbing connections and jets for clogs or leaks.
- Check massage functions and remote for responsiveness.
- Clean any filters or screens inside the foot basin.

3 Monthly Inspection

- Test GFCI (Ground Fault Circuit Interrupter) outlets.
- Inspect the power cord for fraying or damage.
- Tighten any bolts or screws that may have loosened.

Trouble Shooting

Water Plug Malfunction

Cause: Air trapped from improper use.

Method 1:

- 1.Remove all water from the basin.
- 2.Turn off the pump.
- 3.Use a sharp tool to gently open the water plug to release air (be cautious).
- 4.Adjust plug length if needed.

Method 2:

- 1.Remove all water from the basin.
- 2.Let the chair sit overnight to allow air pressure to release naturally.

Seat Movement Issues

Check these first:

Is it plugged in?

Is the power turned on?

Is the red power light on?

Are all wiring connections secure?

Still not working?

Swap the black and red wires at the seat motor to test motor function.

This helps identify which motor may be faulty.

Contact support with results.

Solution for Motor Noise or Malfunction

- A slight motor sound during operation is normal.
- If the controller does not function properly, please check that the plug and socket are securely connected and ensure the power switch is turned on.
- When the product operates continuously beyond the rated working time, the thermal protector will automatically activate to shut down the system for safety.
- The product can be used again after resting for approximately 30 minutes.



Visit our YouTube channel for trouble shooting videos here:
<https://www.youtube.com/@protabeauty>

Warranty and Support

- **Warranty:** This product comes with a year warranty that covers defects in materials and parts. Failure to follow recommended care will void product warranty. Consumer misuse not covered. Inspection Required. Normal wear and tear not covered. Satisfaction Does Not Apply.
- **Customer Support:** For any issues with assembly, use, or maintenance, please contact our customer service team at **+1 604 438 3399** Monday–Friday, 9:00 AM – 5:00 PM (Local Time) or email to **info@protabeauty.com**
- **Service:** If you need repairs or parts replacement, contact us for assistance.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.