



USER
MANUAL
HYDRAULIC FACIAL BED
CR-822

All rights reserved.

Printed in Canada

TABLE OF CONTENTS

1. INTRODUCTION	01
.....	
2. SAFETY GUIDELINES	01
.....	
3. PARTS AND FEATURES	02
.....	
4. INSTALLATION INSTRUCTIONS	03-05
.....	
5. CLEANING AND MAINTENANCE	06
.....	
6. WARRANTY AND SUPPORT	07
.....	

Please read this manual carefully before using the product to ensure safe and optimal use.


Our company reserves the right to improve design and modify the products without prior notice.

Introduction

Thank you for purchasing the Hydraulic Facial Bed. This product has been designed to provide comfort and convenience for both the practitioner and client during facial and beauty treatments. The hydraulic system allows for easy adjustment of the bed's height and angle to ensure optimal comfort and access.

Safety Guidelines

- Max Weight Capacity: Always ensure the weight capacity of the bed is not exceeded.
- Stable Surface: Always place the bed on a level, stable surface. Do not stand on this equipment.
- Hydraulic Fluid: Only use hydraulic fluid recommended by the manufacturer.
- Lock Mechanisms: Always ensure the height, backrest, and footrest adjustments are locked in place before use. Do not allow children to play with .
- Do Not Overload: Avoid excessive force on the adjustable parts of the bed to prevent damage.
- Electrical Safety: If the bed includes any electrical components, ensure it is properly connected to the power source.
- This product should be used by an experienced person who must be familiar with the product structure, performance and instructions.
- Tighten bolts and nuts regularly to avoid failure caused by loose, sliding, vibration and falling off.
- This products is not allowed to operate when it's with fault. If abnormal phenomenon or abnormal sound is found, it must be stopped for inspection immediately, and work can be resumed after troubleshooting.
- Maintenance should be processed by trained professionals.
- After every treatment, please only use neutral solution to clear the dust or stains on the product.
- When adjusting each part, please keep your hands, feet and head away from the position indicated by the arrow.
(As shown in the photo)

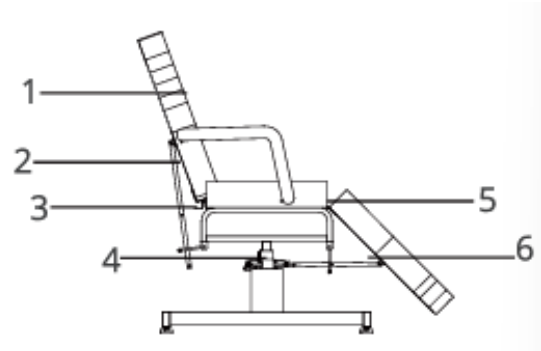



Parts and Features

Features:

- Hydraulic height adjustment system
- Adjustable backrest and footrest
- Soft, durable upholstery
- Sturdy metal frame
- Removable armrests for added convenience
- Comfortable headrest with a cut-out for facial treatments






Specifications

- Dimensions: 73" x 32" x 24"-30.5"
- Weight: 150lb
- Material: Steel frame with high-quality faux leather upholstery
- Weight Capacity: Up to 350lb
- Hydraulic Adjustment Range: 24"-30.5"
- Manually adjustable headrest & footrest 360° swivel mechanism
- Color Options: Black/ White
- Power Supply: Manual hydraulic system (no electricity required)
- Environment Temperature: 0~40 degree

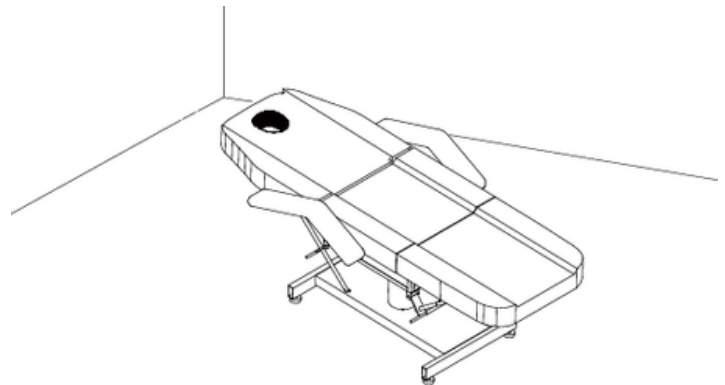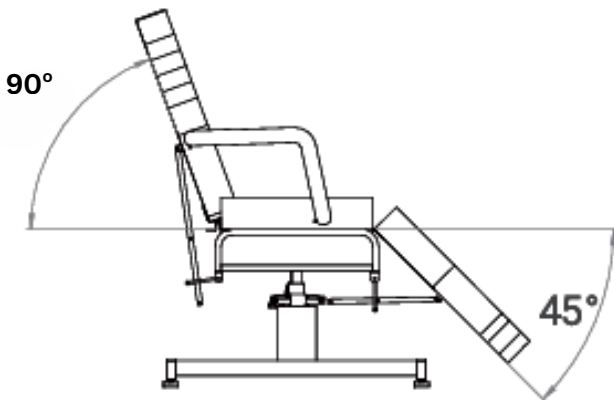

Installation Instructions

Parts List

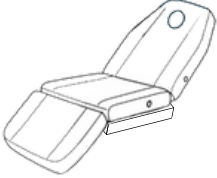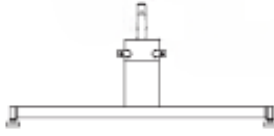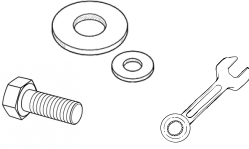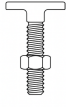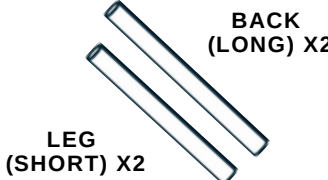
(1) Bed Top 	(2) Armrests ×2 	(3) Bed Base 	(4) Pillow 
(5) Base Screw Set 	(6) Screws with Bolts  X4	(7) Supporting Bars 	(8) Screws x8 

Step 1: Unbox and Inspect

Place the product to a proper location and position. Carefully unbox the hydraulic facial bed and check all components listed in the parts list. Ensure that all parts are in good condition and undamaged. Please contact distributor or manufacturer if there's any problem.

Step 2: Attach the Bed with Supporting Bar


1. Place the main bed on a flat surface.
2. Attach the metal bars to the bed — for the back section and the leg section.
Secure them with screws.

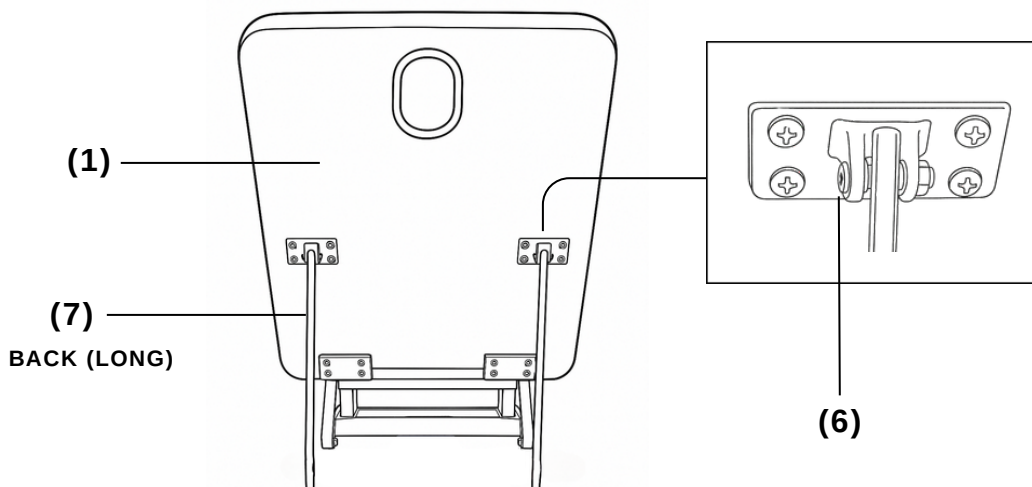

Installation Instructions

Step 3: Attach the Base with Top



1. Move the bed frame onto the hydraulic base. Align the holes properly.
2. Insert the screws in the following order and tighten securely.

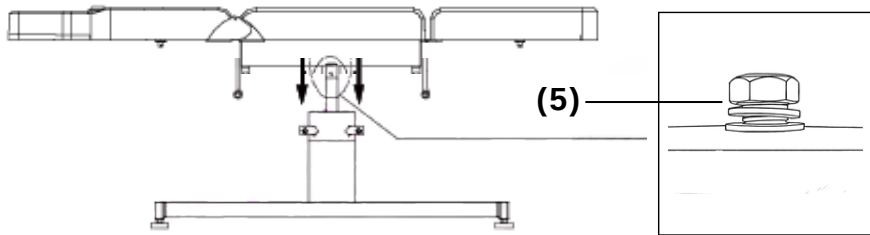

(from top to bottom):
the hex screw,
lock washer,
then plain washer.

Step 4: Attach the Supporting Bar with Base


1. Fasten the screw into the top hole.
2. Insert the previously installed metal bars through the holes of the bar control, then secure with another screw into the bottom hole.
3. Repeat this for the footrest supporting bar.

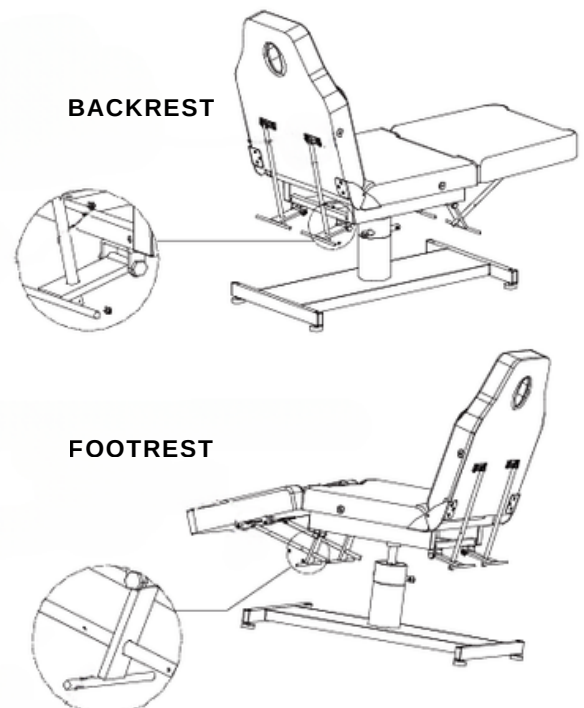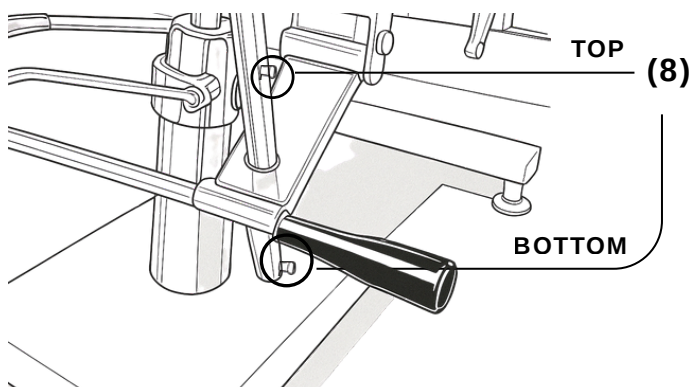

Installation Instructions

Step 5: Attach Armrests

1. Insert the armrests into the designated slots on either side of the bed.
2. Insert pillow.

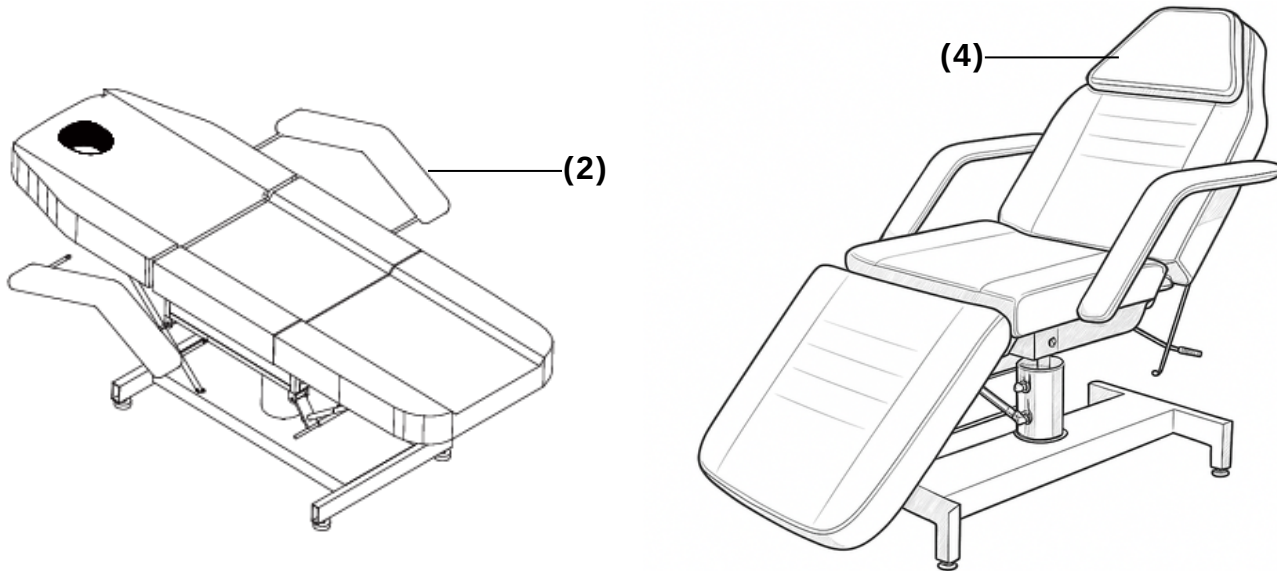

Step 6: Final Inspection

Once the bed is fully assembled, double-check all screws and parts to ensure everything is secure. Perform a test adjustment to ensure the hydraulic mechanism is functioning smoothly.

Cleaning and Maintenance

Cleaning the Upholstery

1. Use a soft cloth dampened with a mild soap solution to clean the upholstery.
2. Do not use abrasive cleaners or solvents as they may damage the surface.
3. Wipe off any excess moisture with a dry cloth.

Hydraulic System Maintenance

1. Check the hydraulic system periodically for leaks or malfunctions.
2. Ensure the hydraulic fluid is at the proper level. If needed, refill using the recommended hydraulic fluid.
3. Do not attempt to disassemble or repair the hydraulic system yourself. Contact a professional technician for any necessary repairs.

General Care

- Keep the bed in a clean, dry area to prevent rusting or damage.
- Regularly check all screws, bolts, and connections for tightness.
- Please stay the upholstery flat to 180 degree to avoid folding and wrinkles.

Troubleshooting		
Issue	Possible	Cause Solution
Bed won't lift	Hydraulic system malfunction	Check the hydraulic pump, refill lubricating fluid if necessary.
Bed doesn't lock in position	Adjustment lever not engaged properly	Ensure all levers are securely locked.

**If problem is still not solved after above operations,
please contact Please contact distributor or manufacturer.**

Warranty and Support

- **Warranty:** This product comes with a year warranty that covers defects in materials and parts. Failure to follow recommended care will void product warranty. Consumer misuse not covered. Inspection Required. Normal wear and tear not covered. Satisfaction Does Not Apply.
- **Customer Support:** For any issues with assembly, use, or maintenance, please contact our customer service team at **+1 604 438 3399** Monday–Friday, 9:00 AM – 5:00 PM (Local Time) or email to **info@protabeauty.com**
- **Service:** If you need repairs or parts replacement, contact us for assistance.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.