



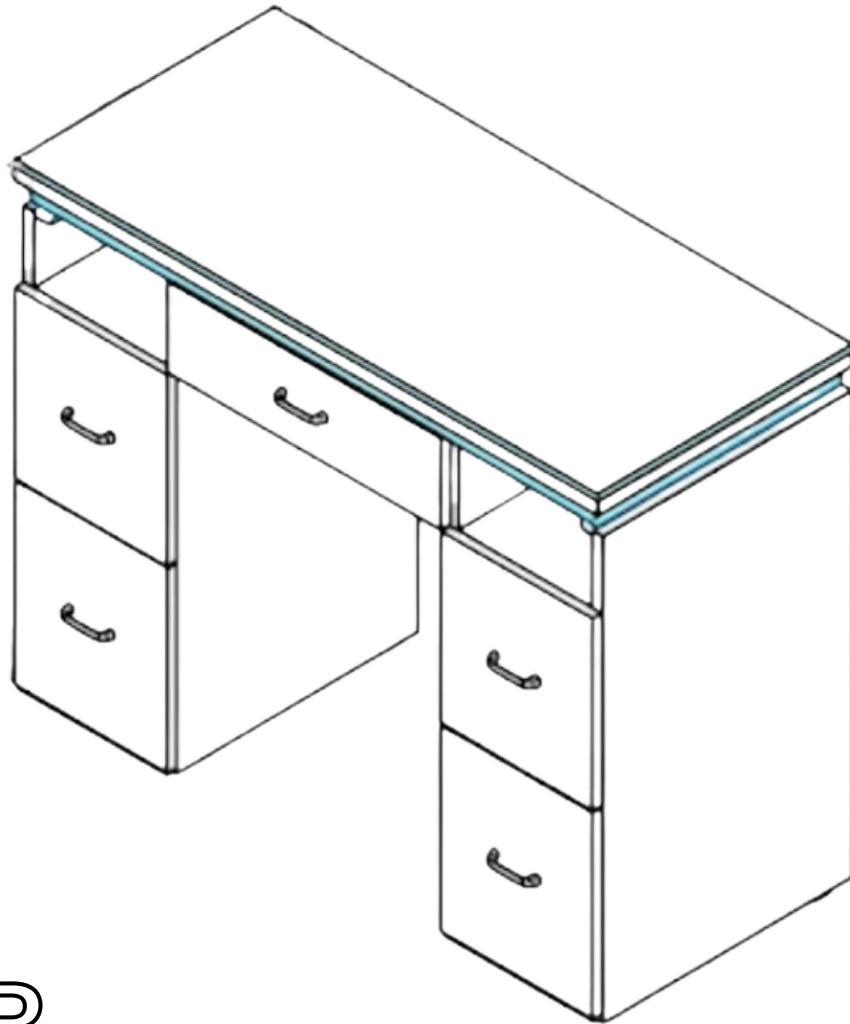

USER
MANUAL
**MANICURE TABLE
PB-156**

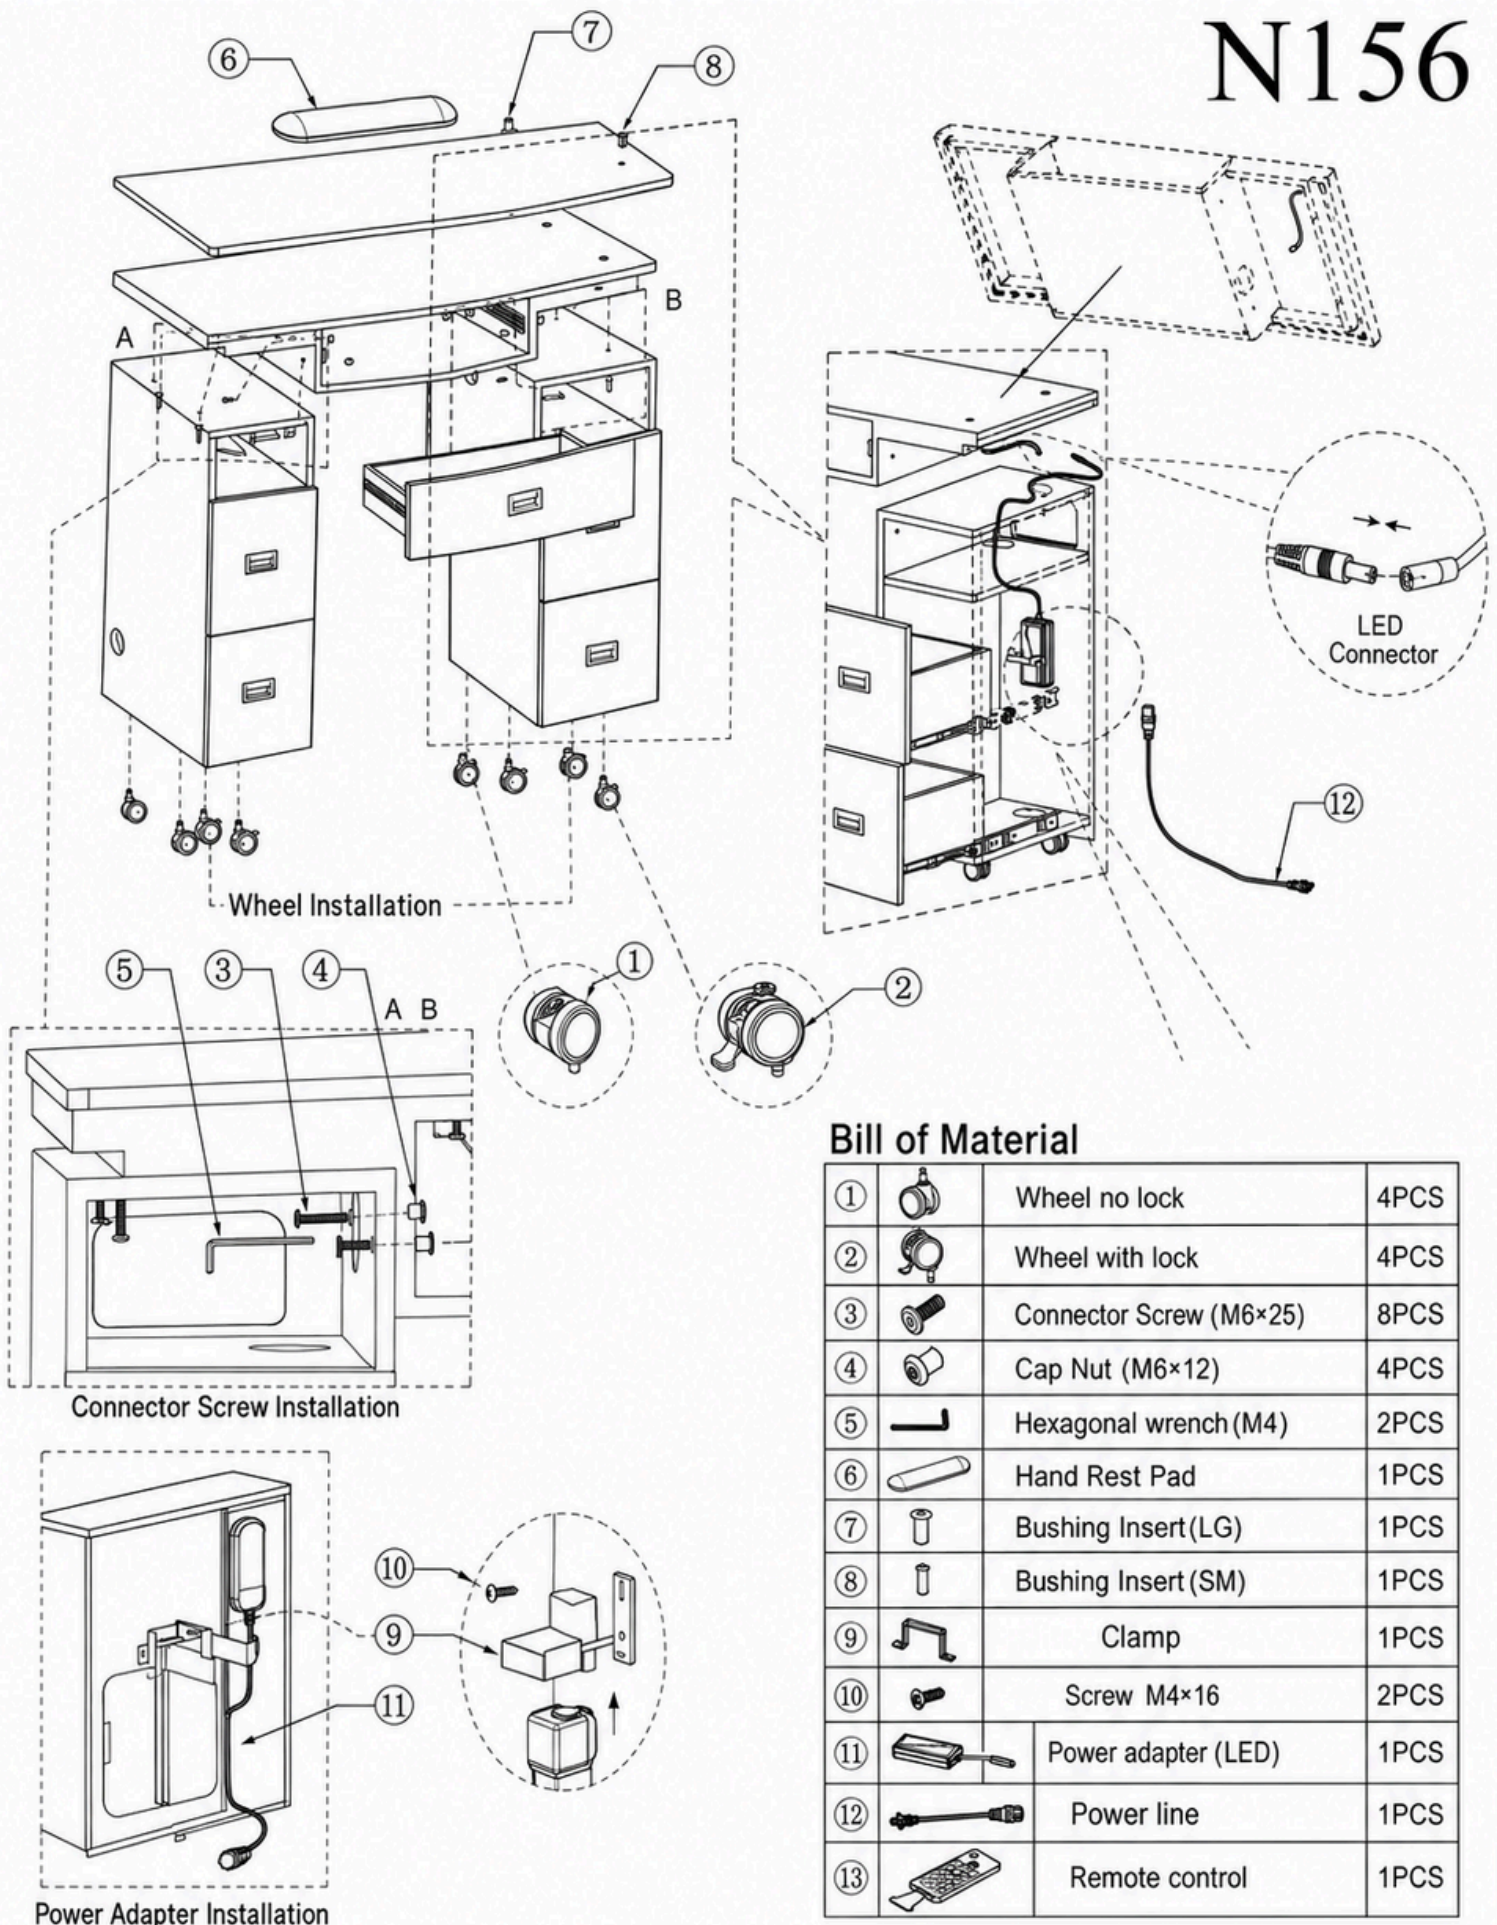

Please remove the insulating strip before using the remote control.

ASSEMBLY STEPS

STEP 1 – INSTALL THE CASTERS

Attach all casters to the bottom of each cabinet.

Install the locking casters (Part ②) at the front of the workstation and the standard casters (Part ①) at the remaining positions.

STEP 2 – ASSEMBLE THE CABINETS

Position cabinets A, B, C, and D according to the assembly diagram.

Align all connector holes before tightening.

STEP 3 – SECURE THE CONNECTOR SCREWS

Insert the connector screws (Part ③) into each connector location.

Tighten the screws using the supplied hex wrench (Part ⑤).

Install the cap nuts (Part ④) to secure each connection.


STEP 4 – INSTALL THE COUNTERTOP

Place the marble countertop onto the assembled cabinets.

Ensure all holes are properly aligned before fastening.

STEP 5 – INSTALL THE HAND REST PADS

Insert the large bushing inserts (Part ⑥) and small bushing inserts (Part ⑦) into the countertop.

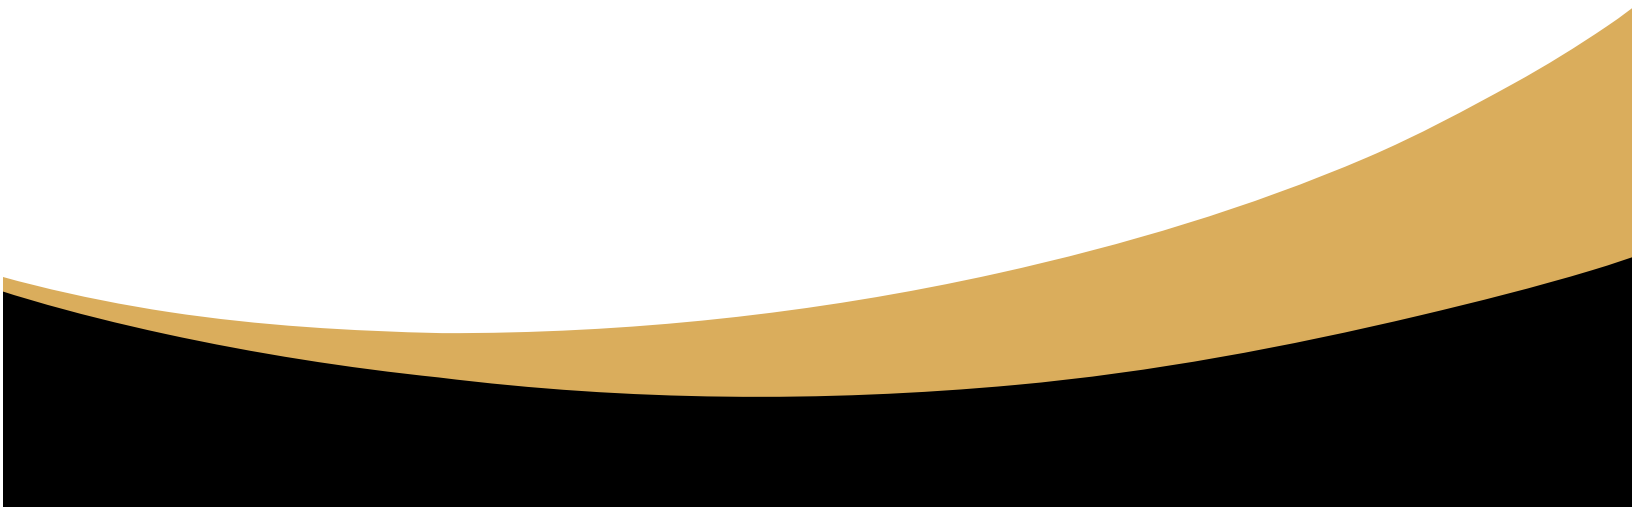- Place the hand rest pads (Part ⑧) into position.
- 

FINAL CHECKS

- Confirm all screws are tight and the top is level.
- Ensure drawers/doors open smoothly and casters roll freely.
- Wipe away fingerprints and debris with a soft cloth.

CARE & USE

- Avoid standing or sitting on the top.
- Clean with a damp cloth and mild soap; do not use abrasives.
- Periodically re-check screw tightness, especially after the first week of use or relocation.
- If anything doesn't align as expected, loosen, realign, and retighten rather than forcing parts together. For support, contact your seller with your model number and a photo of the hardware layout.

