


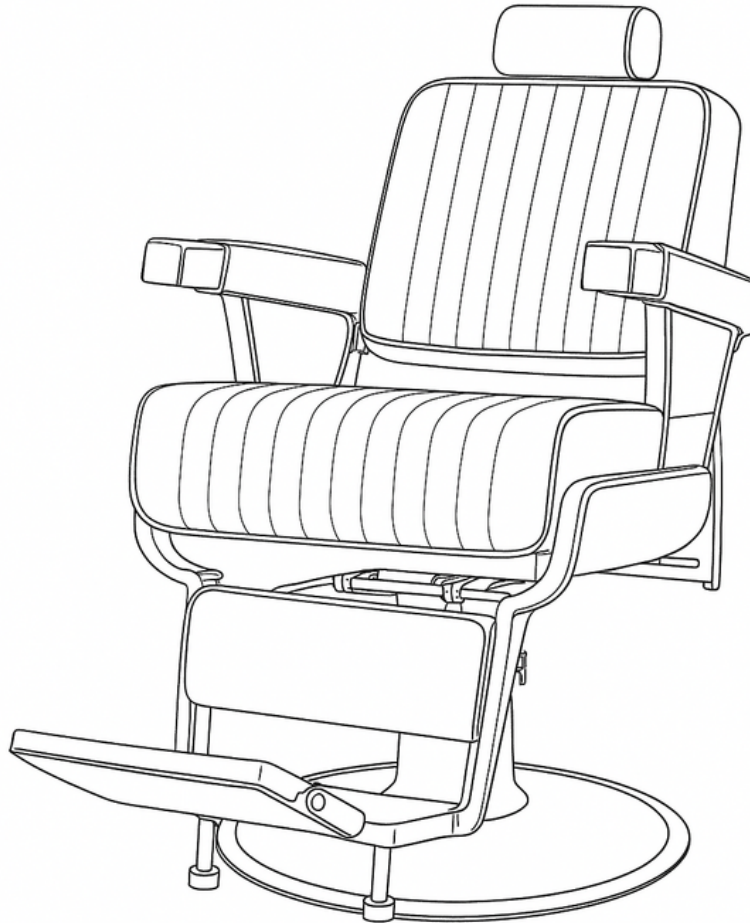

USER MANUAL **BARBER CHAIR PB-31909**

All rights reserved.

Printed in Canada

TABLE OF CONTENTS

1. INTRODUCTION	01
.....	
2. SAFETY GUIDELINES	01
.....	
3. PARTS AND FEATURES	02-03
.....	
4. INSTALLATION INSTRUCTIONS	04-05
.....	
5. CLEANING AND MAINTENANCE	06
.....	
6. WARRANTY AND SUPPORT	07
.....	

Please read this manual carefully before using the product to ensure safe and optimal use.

Our company reserves the right to improve design and modify the products without prior notice.



Introduction

Welcome to the Barber Chair manual. This chair combines classic design with modern functionality, designed to elevate the professional grooming experience. Please read this manual thoroughly before use to ensure proper installation, safe operation, and care.

Safety Guidelines

- Do not seat over maximum weight limit
- Place on a flat, stable surface only to prevent tipping
- Ensure all bolts are tightened before use to maintain stability
- Do not stand or apply excessive pressure on the footrest or seat
- Keep children away from the chair, especially moving or hydraulic parts
- Lock the hydraulic mechanism when not adjusting the height
- Ensure that the chair is in its upright and locked position before allowing a client to sit
- Avoid operating the reclining mechanism with excessive force
- Periodically inspect hydraulic pump and base for wear or leakage
- Do not use the chair if any components are damaged or malfunctioning
- Use only as intended for professional grooming services
- Never attempt repairs or modifications without professional guidance



Parts and Features

Features:

- High-density foam and tufted leatherette
- Gold-finished frame for durability and style
- Reclining backrest for client comfort
- Adjustable, removable headrest
- 360-degree smooth swivel
- Hydraulic height adjustment with locking mechanism


Specifications

- Dimensions: 46"-59"x27"x48"-53"
- Weight: 132lb
- Material: High-density foam, leatherette upholstery, steel frame
- Base Diameter: 27 inches
- Height Range: 23 to 28 inches
- Chair Width (Including Armrests): 27 inches
- Seat Depth: 18 inches
- Weight Capacity: 350lbs
- Recline Angle: 90 to 130 degrees
- Rotation: 360 degrees
- Pump Mechanism: Heavy-duty hydraulic system

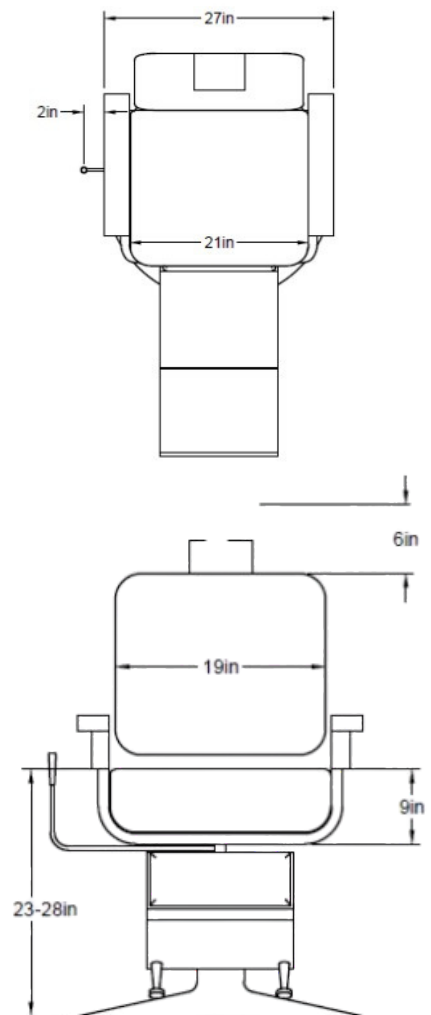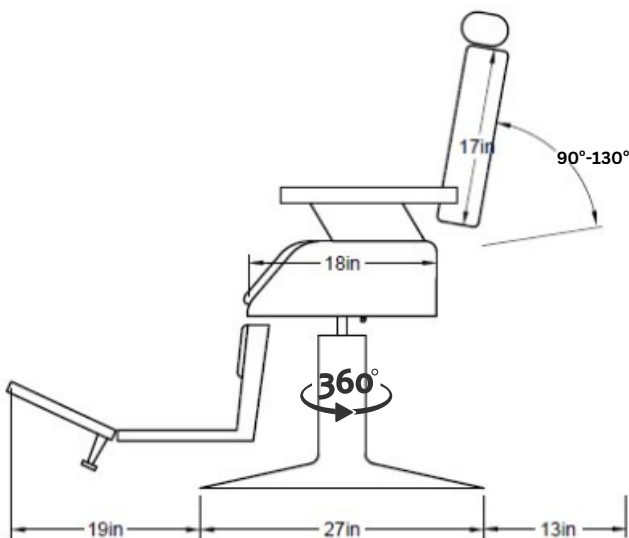


Parts and Features


Free Adjustment Headrest

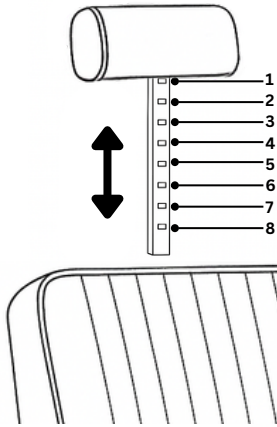

Retro Towel Bar

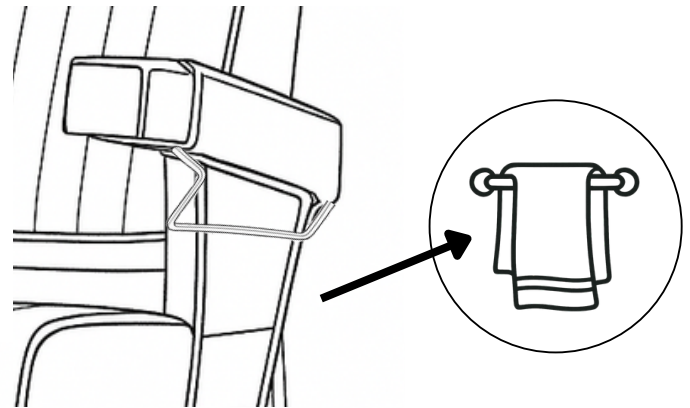

Ergonomic Design

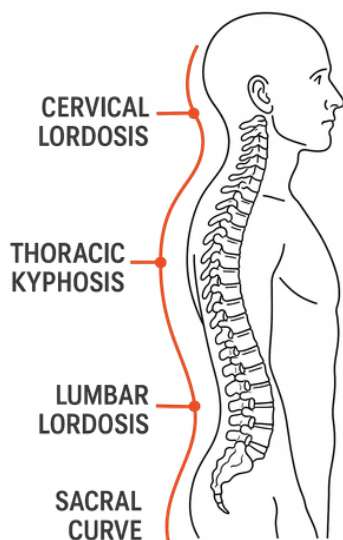

Water Proof







Stain Resistant




Easy to Clean

Installation Instructions

Parts List

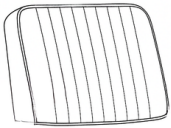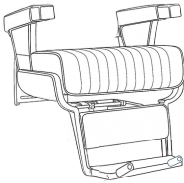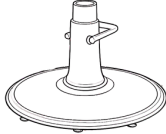(1) Backrest 	(2) Seat 	(3) Hydraulic Base 	(4) Footrest 	(5) Headrest 
(6) Screws (Footrest)  X2	(7) Screws (Backrest)  X3	(8) Hex Wrench 	(9) Adjustable Leveling Feet 	

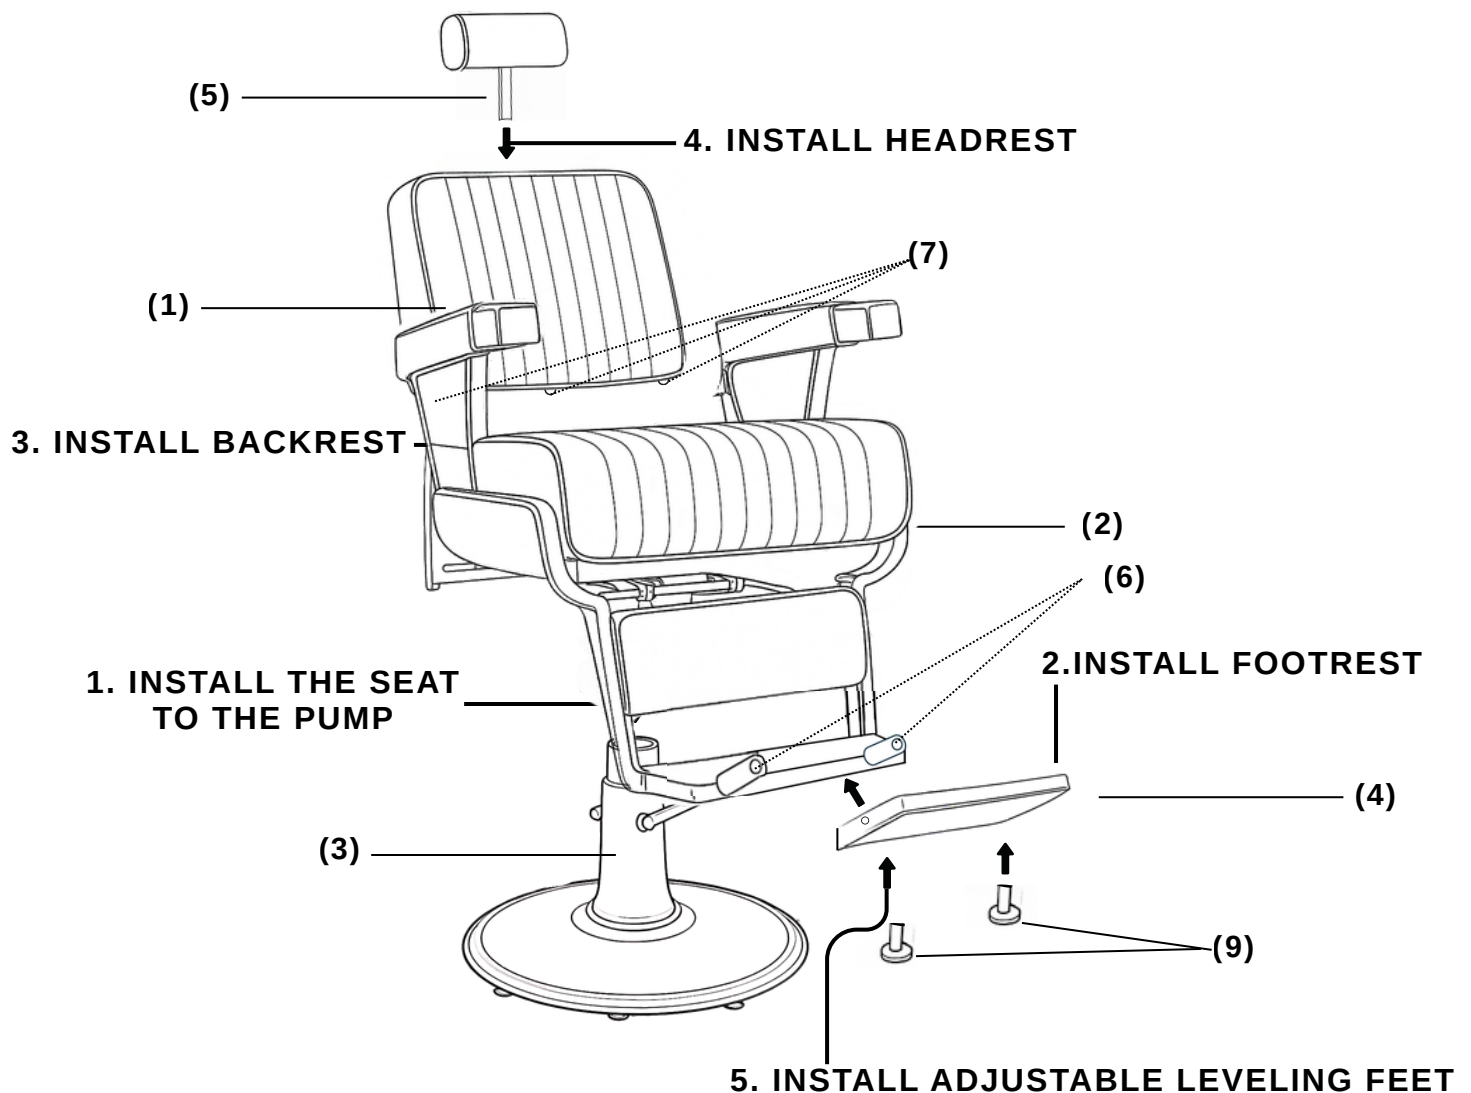

Installation Instructions

Step 1: Unbox and Inspect

Place the product to a proper location and position. Carefully unbox the hydraulic facial bed and check all components listed in the parts list. Ensure that all parts are in good condition and undamaged. Please contact distributor or manufacturer if there's any problem.

Step 2: Install the Seat to the Pump

1. Place the heavy-duty base on a level surface
2. Ensure rubber pads or feet are intact and stable
3. Insert the hydraulic pump from the seat base into the center of the chair base
4. Secure with bolts provided using a wrench

Step 3: Install Footrest

1. Align the footrest to the front lower brackets
2. Secure using provided bolts

Step 4: Install Backrest

1. Align the backrest brackets with the holes on the seat
2. Attach and tighten bolts firmly

Step 5: Install Headrest

1. Slide the headrest into the designated slot
2. Adjust to desired height and lock in place

Step 6: Install Adjustable Leveling Feet

1. Secure adjustable leveling feet into the designated slot
2. Adjust to desired height and lock in place

FINAL CHECK: ENSURE ALL BOLTS ARE TIGHT AND COMPONENTS MOVE SMOOTHLY

Cleaning and Maintenance

Cleaning the Upholstery

1. Use a soft cloth dampened with a mild soap solution to clean the upholstery.
2. Do not use abrasive cleaners or solvents as they may damage the surface.
3. Wipe off any excess moisture with a dry cloth.

Hydraulic System Maintenance

1. Check the hydraulic system periodically for leaks or malfunctions.
2. Ensure the hydraulic fluid is at the proper level. If needed, refill using the recommended hydraulic fluid.
3. Do not attempt to disassemble or repair the hydraulic system yourself.

General Care

- Keep the chair in a clean, dry area to prevent rusting or damage.
- Regularly check all screws, bolts, and connections for tightness.

Troubleshooting		
Issue	Possible	Cause Solution
Chair won't lift	Hydraulic system malfunction	Check the hydraulic pump, refill lubricating fluid if necessary.
Chair doesn't lock in position	Adjustment lever not engaged properly	Ensure all levers are securely locked.

**If problem is still not solved after above operations,
please contact Please contact distributor or manufacturer.**

Warranty and Support

- **Warranty:** This product comes with a year warranty that covers defects in materials and parts. Failure to follow recommended care will void product warranty. Consumer misuse not covered. Inspection Required. Normal wear and tear not covered. Satisfaction Does Not Apply.
- **Customer Support:** For any issues with assembly, use, or maintenance, please contact our customer service team at **+1 604 438 3399** Monday–Friday, 9:00 AM – 5:00 PM (Local Time) or email to **info@protabeauty.com**
- **Service:** If you need repairs or parts replacement, contact us for assistance.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.