



USER MANUAL **FACIAL BED PB-813**

All rights reserved.

Printed in Canada

TABLE OF CONTENTS

1. INTRODUCTION	01
.....	
2. SAFETY GUIDELINES	01
.....	
3. PARTS AND FEATURES	02
.....	
4. INSTALLATION INSTRUCTIONS	03-05
.....	
5. CLEANING AND MAINTENANCE	06
.....	
6. WARRANTY AND SUPPORT	06
.....	

Please read this manual carefully before using the product to ensure safe and optimal use.

Our company reserves the right to improve design and modify the products without prior notice.

Introduction


Thank you for purchasing the Facial Bed. This high-quality facial bed is designed to provide comfort for your clients during various beauty and wellness treatments. Its adjustable features and sturdy design ensure the best support during facial treatments, massages, and other spa procedures.

Safety Guidelines

- Ensure the bed is on a level surface before use.
- Do not exceed weight capacity. Do not stand on this equipment.
- For indoor use only.
- Keep fingers clear of moving parts during adjustment.
- Store sharp tools properly to avoid injury.

Usage Instructions

- Backrest Adjustment: Pull the lever at the back and lift the backrest to the desired angle. Release the lever to lock in place.
- Leg Rest Adjustment: Adjust leg rest using the side handle or sliding mechanism.
- Using the Drawers: Pull to open, store tools/towels/products. Avoid overloading.

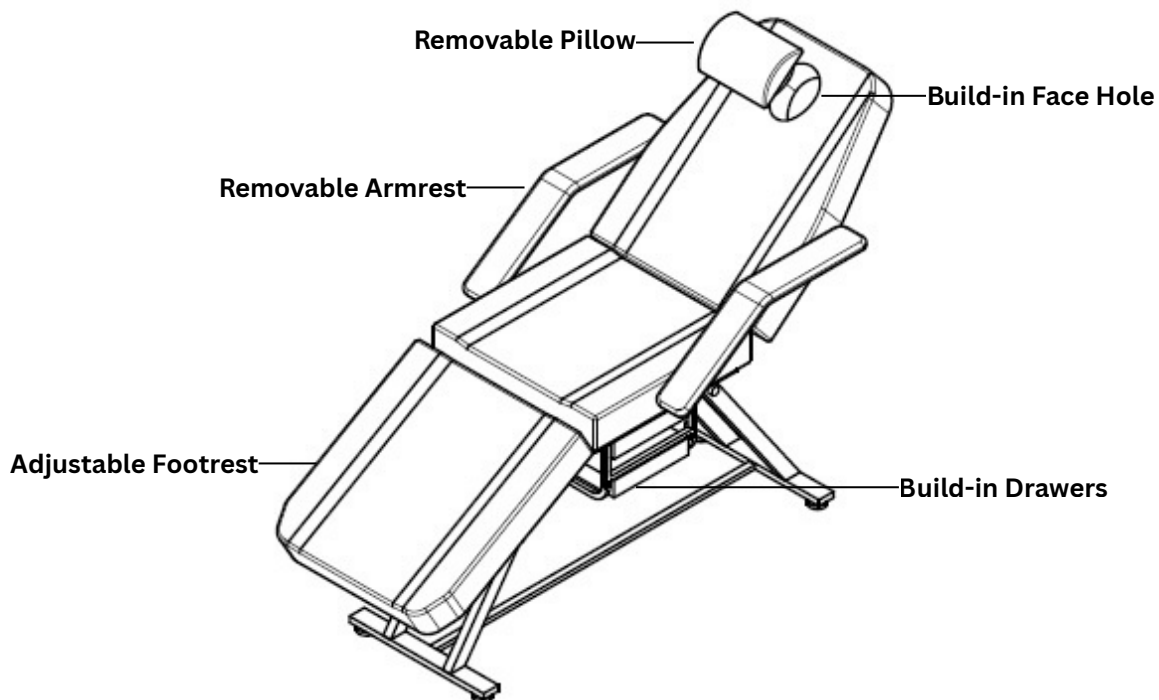




Parts and Features

Specifications

- Dimensions (L x W x H): 71" x 33" x 28"
- Weight: 110lbs
- Adjustable Backrest Angle: 0° – 90° Adjustable Footrest Angle: 0° – 50°
- Upholstery: PU Leather, High-Density Foam
- Frame: Heavy-duty metal steel
- Weight Capacity: 350lb
- Color Options: Black/ White
- Accessories: Flat Rectangle Pillow*1
- Storage: 2–3 Sliding Drawers Under Seat





Features

- Soft, high-quality upholstery for comfort
- Sturdy frame for maximum stability
- 4" thick foam padding
- Head rest can be bought separately
- Built in face opening with removable headrest pillow
- Removable armrests
- Equipped with built in drawers

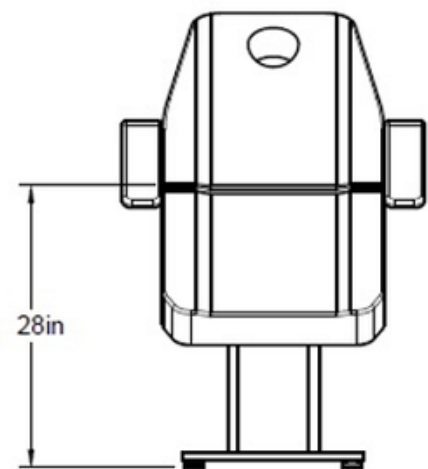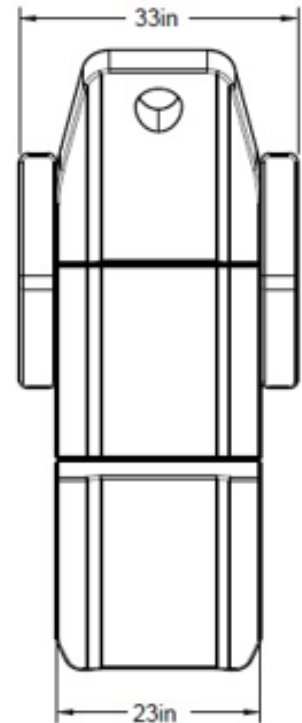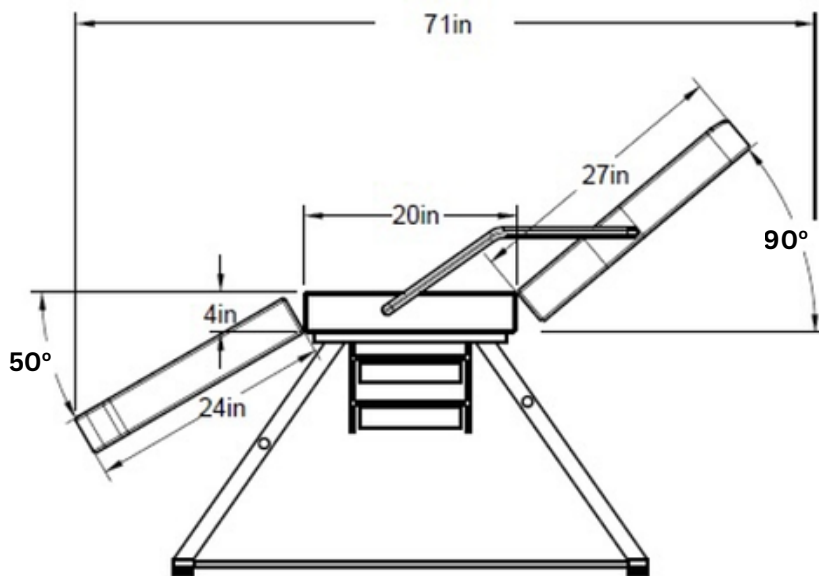

Installation Instructions


Parts List

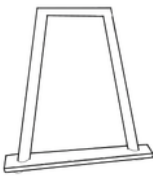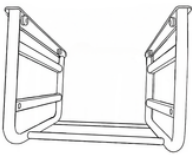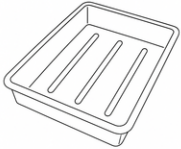(1) Bed Mattress x1 	(2) Armrests x2 	(3) Legs(Front&rear)  x2	(4) Drawer frame x1 
(5) Pillow x1 	(6) Plastic drawers  x2	(7) Screws x12 	(8) Wrench x1 

Step 1: Attach the Front and Rear Legs

- Identify the front and rear legs.
- Align each with the holes under the seat frame.


Use 4 screws for each leg to secure them tightly.

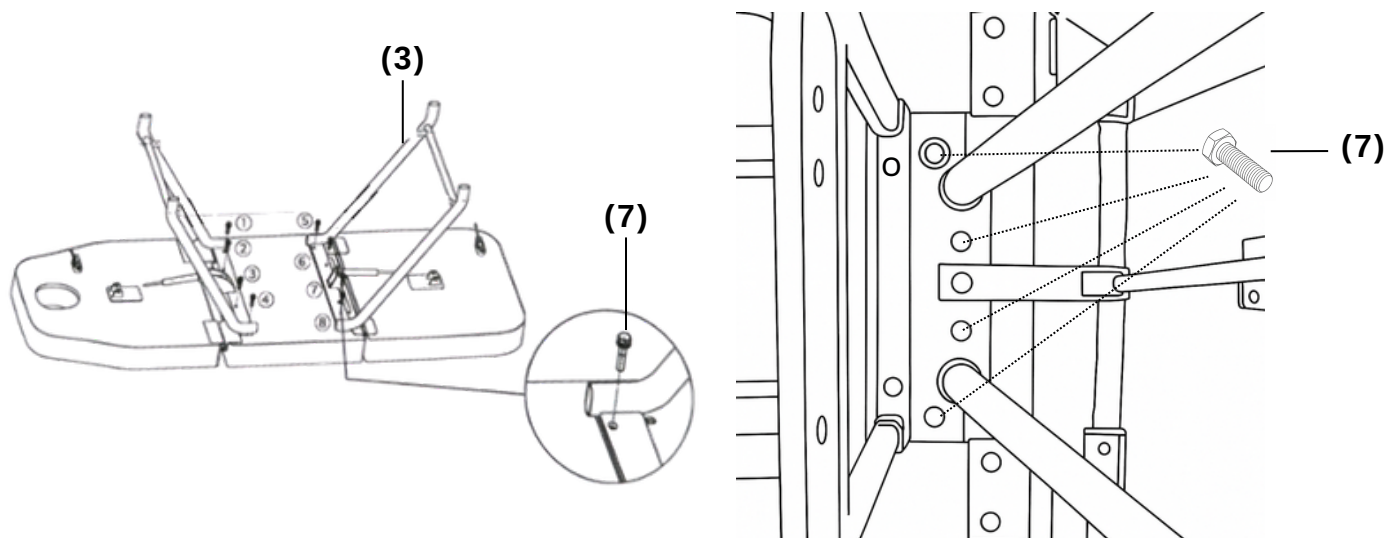

Installation Instructions


Step 2: Install the Drawer Frame

- Position the drawer frame underneath the seat.
- Align the holes and secure it using 4 screws.

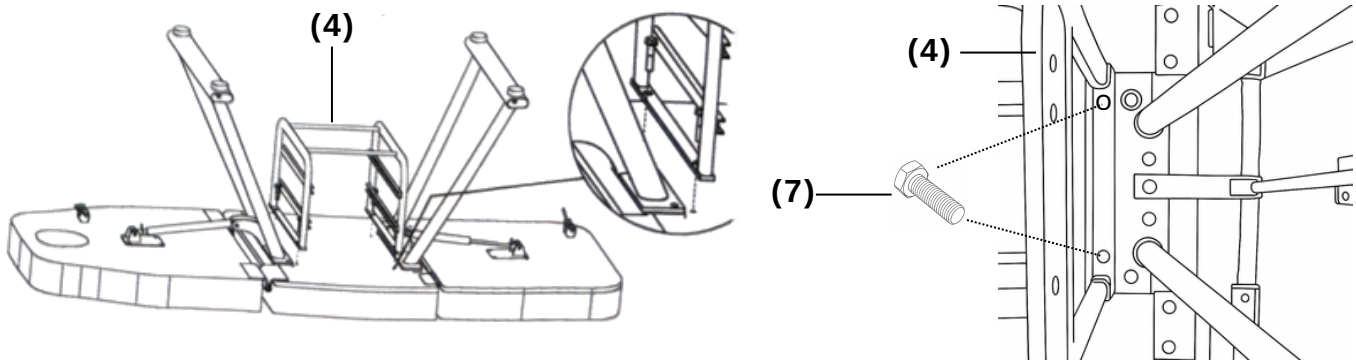

Step 3: Insert the Drawers


- Slide both plastic drawers into the drawer frame.
- Make sure they slide in smoothly and stop securely.

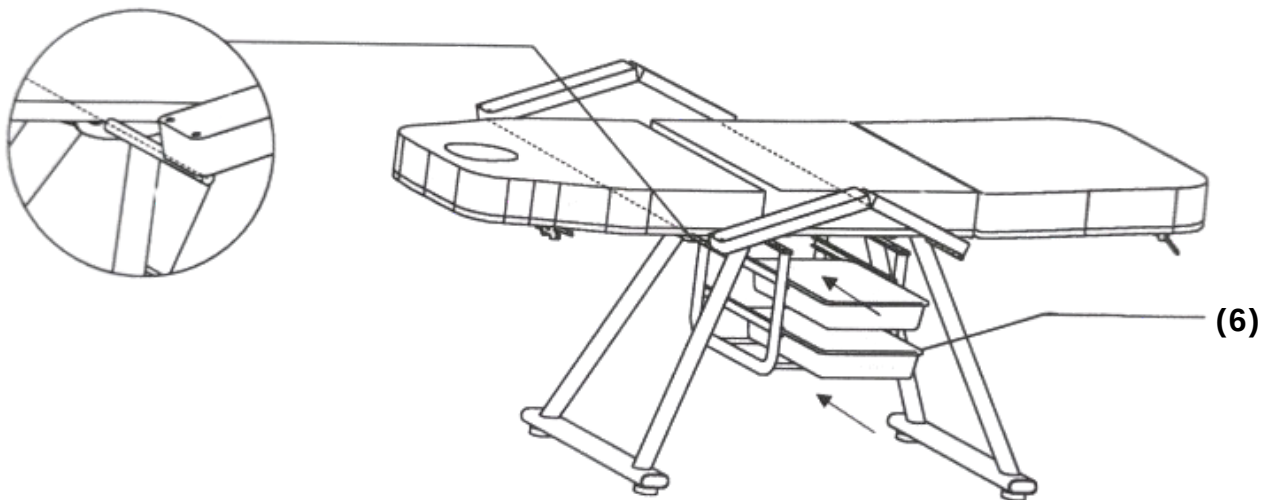

Installation Instructions


Step 4: Install the Adjustable Support Bar

- Find the support bar beneath the seat of the back and foot.
- Unscrew the bolt on the bottom of the bar first.
- Insert the bar through the designated hole in the frame.
- Re-tighten the bolt after the bar is in place. This allows you to adjust the angle of the backrest.

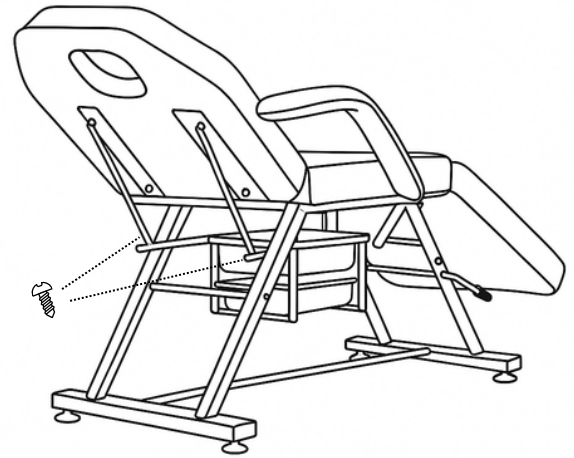

Step 5: Attach Armrests and Headrest

- Insert the armrests into the side slots and push or screw them in firmly.
- Place the headrest at the top of the chair. It may slot in or attach with Velcro depending on the design.

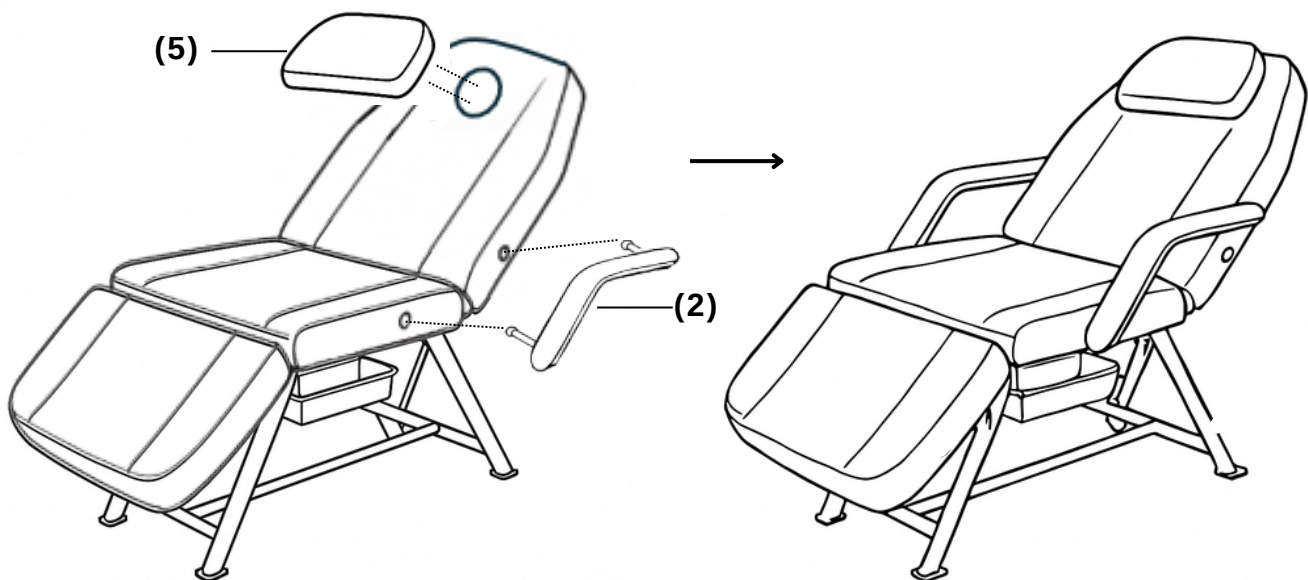

✓ After Assembly, Check:

- All screws are securely fastened.
- Drawers slide smoothly.
- The backrest and leg rest adjust properly.
- The bed feels stable and balanced.

Cleaning and Maintenance

Cleaning the Upholstery

1. Use a soft cloth dampened with a mild soap solution to clean the upholstery.
 2. Do not use abrasive cleaners or solvents as they may damage the surface.
 3. Wipe off any excess moisture with a dry cloth.
- Keep the bed in a clean, dry area to prevent rusting or damage.

Maintenance Tips

- **Inspection:** Check bolts and hinges monthly to ensure safety and stability.
- **Lubrication:** Apply silicone spray to drawer tracks if they become stiff.

Warranty and Support

- **Warranty:** This product comes with a year warranty that covers defects in materials and parts. Failure to follow recommended care will void product warranty. Consumer misuse not covered. Inspection Required. Normal wear and tear not covered. Satisfaction Does Not Apply.
- **Customer Support:** For any issues with assembly, use, or maintenance, please contact our customer service team at **+1 604 438 3399** Monday–Friday, 9:00 AM – 5:00 PM (Local Time) or email to **info@protabeauty.com**
- **Service:** If you need repairs or parts replacement, contact us for assistance.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.