



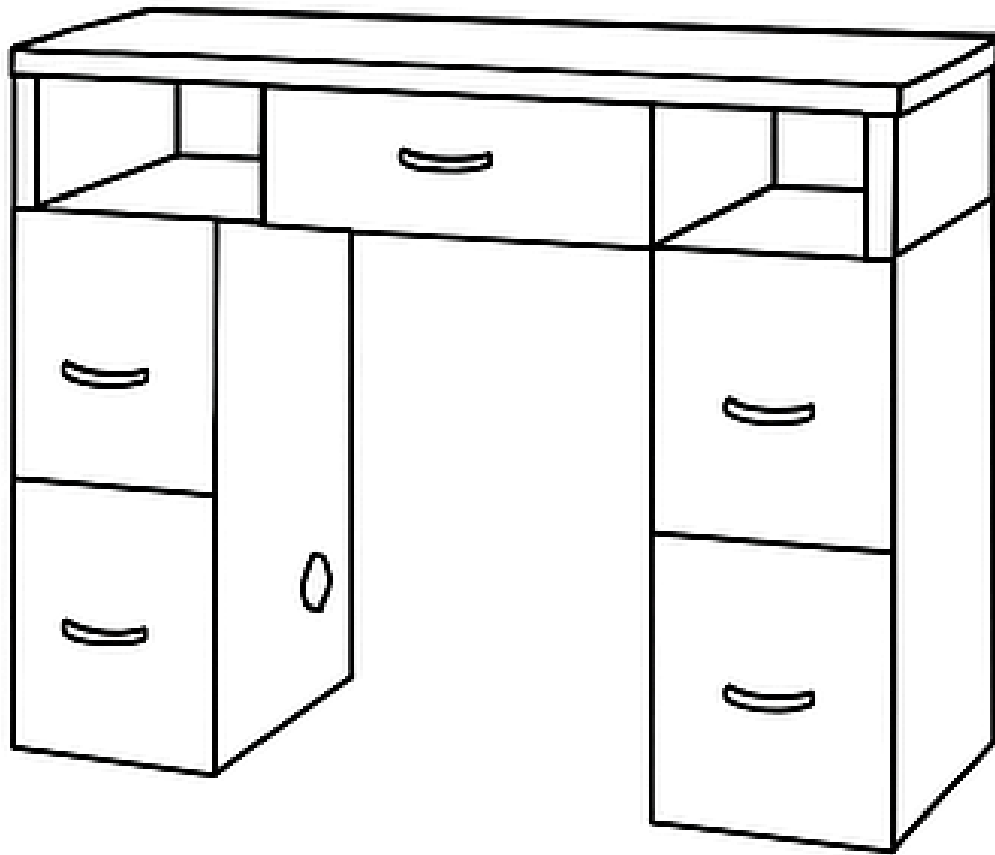

USER
MANUAL
MANICURE TABLE
PB-N086/M

ASSEMBLY INSTRUCTIONS

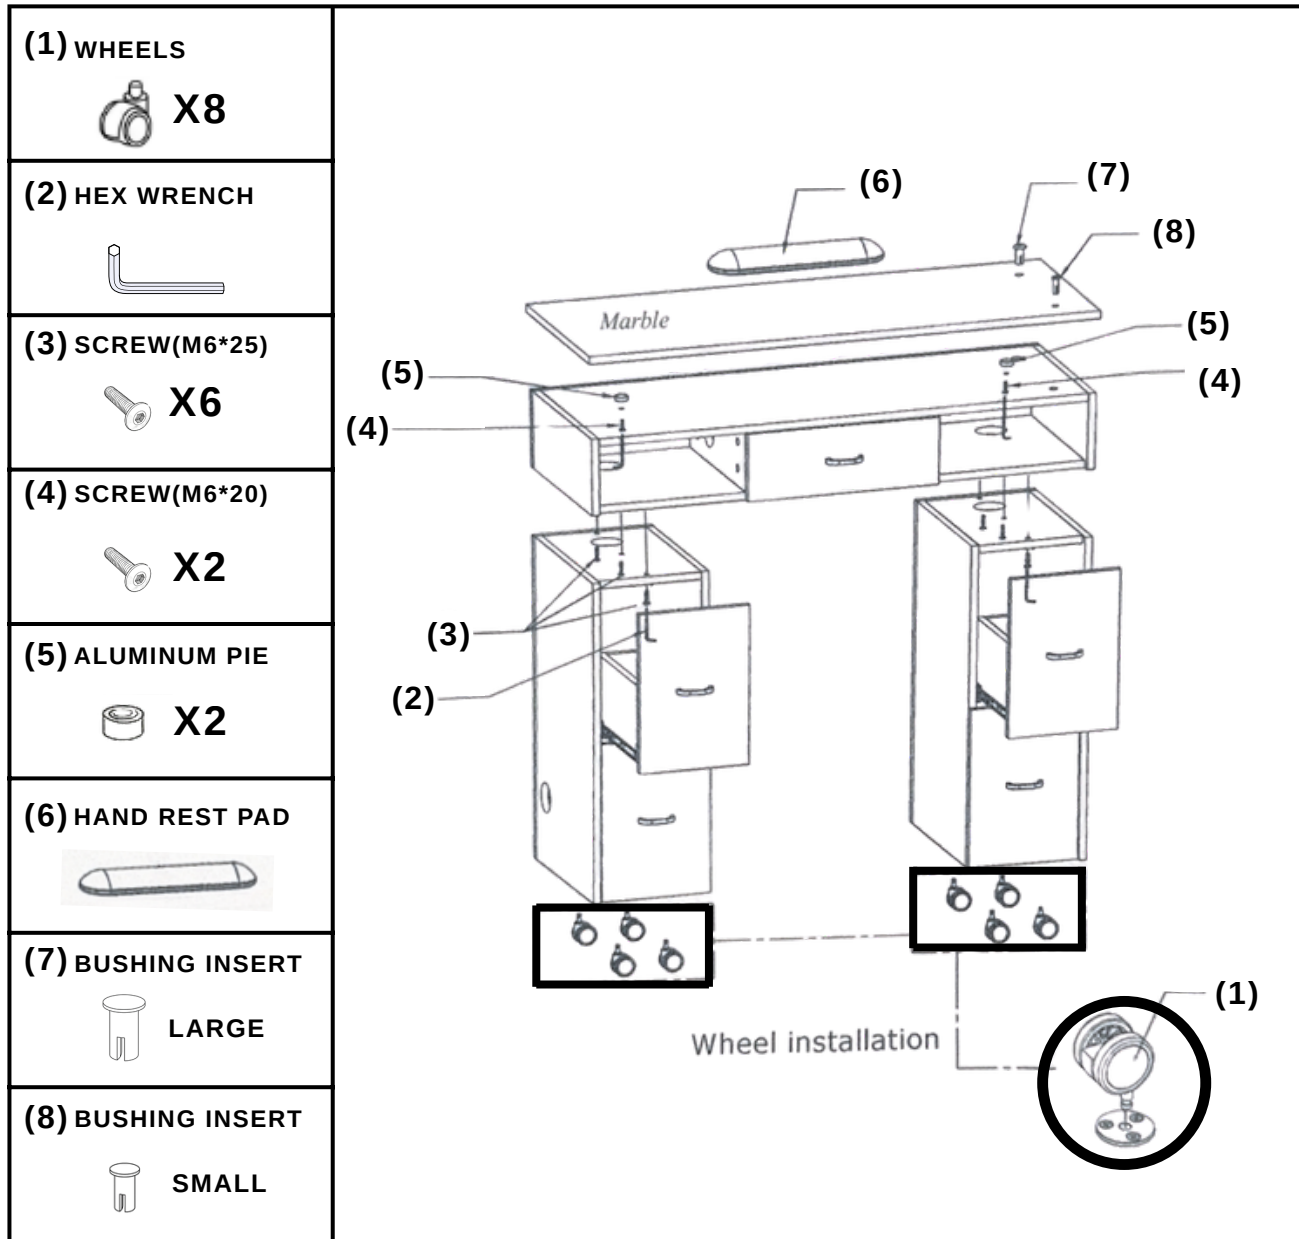

ASSEMBLY STEPS

1) INSTALL THE WHEELS

- Lay each pedestal (cabinet) on its back.
- Press/bolt 4 casters into the base of each pedestal (8 total).
- Ensure they are fully seated; tighten if your casters are bolt-type. Stand the pedestals upright.

2) POSITION THE PEDESTALS

- Place the left and right pedestals upright, drawer fronts facing you.
- Space them to match the width of the top panel. Leave a small gap for alignment.

3) FIT THE ALUMINUM PLATES

- Place the Aluminum Plates (5) on the top edges of the pedestals as shown.
- Fasten each plate loosely with Screws M6×20 (4). Do not fully tighten yet.

4) PREPARE THE TOP PANEL

- Insert the Large (7) and Small (8) Bushing Inserts into the marked holes on the top panel so they sit flush.
- If your pad holes are pre-drilled, align them as shown.

5) MOUNT THE TOP PANEL

- With two people if possible, lower the top panel onto the pedestals, aligning the bushing holes with the plate/bracket holes.
- Insert Screws M6×25 (3) through the bushings and into the plates—start all screws first, then tighten evenly with the hex wrench (2).
- Now fully tighten the M6×20 (4) screws holding the aluminum plates.

6) INSTALL THE HAND-REST PAD

- Position the Hand-Rest Pad (6) over its mounting points.
- Fasten using the predrilled holes. Tighten until snug—do not over-compress the pad.

7) INSTALL THE VACUUM FAN

- From beneath the center opening, lift the Vacuum Fan (10) into place as shown.
- Secure the fan housing using Screws M6×16 (9) ×4.
- Confirm the air inlet faces the tabletop opening and that wiring/ducting is not pinched.
- Route the power cord safely toward the rear of the table.


FINAL CHECKS

- Table is level; all screws are tight.
- Drawers/doors open smoothly; casters roll freely (engage brakes if fitted).
- Fan is firmly mounted and unobstructed.


USE & CARE

- Plug the fan into a grounded outlet; keep intake clear during operation.
- Clean with a damp cloth and mild soap only; avoid abrasives and solvents.
- Re-check screw tightness after the first week of use and after relocation.
- Do not stand or sit on the tabletop; do not lift the table by the top alone.


CR-N086-FRONT

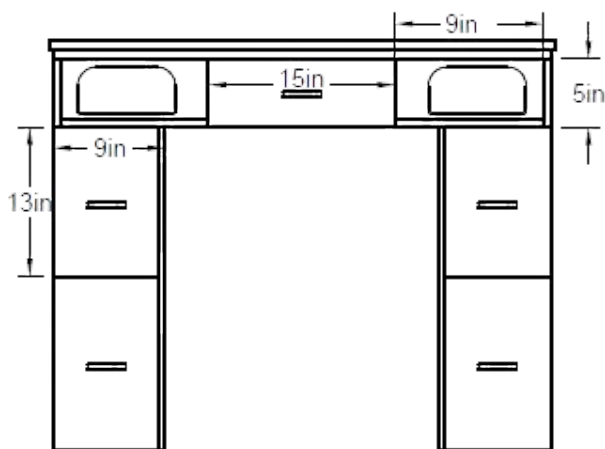

CR-N086-M-FRONT

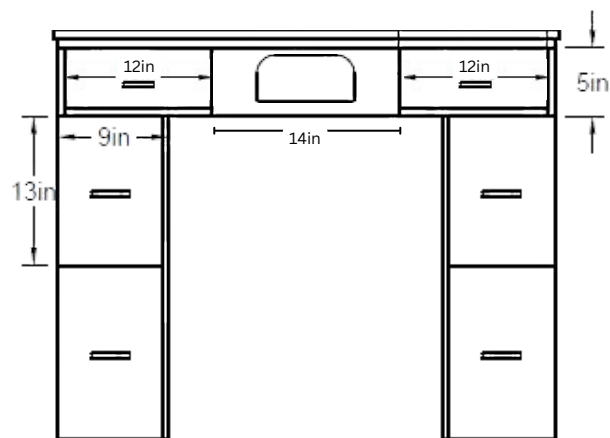

CR-N086-BACK

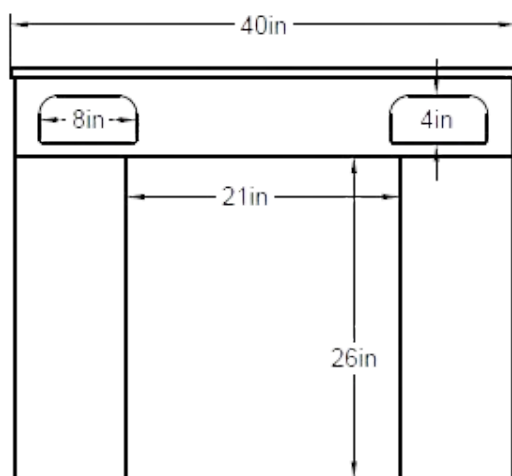

CR-N086-M-BACK

